



SUCTION COVER INSTALLATION

1. REMOVE SHEET METAL SCREW WHICH IS TAPED TO BACK OF SUCTION COVER.
2. THREAD SUCTION COVER INTO BULK-HEAD FITTING IN VESSEL.
3. PUT SHEET METAL SCREW IN OPEN HOLE OF COVER AND USING A PHILLIPS SCREW DRIVER. TIGHTEN SCREW UNTIL SNUG.