

**STANDARD AIR CONTROLS 10-2100-(-)(IMP) & 10-2200-(-)(IMP)**

**Material**

White ABS/grey ABS/chrome-plated ABS.

**Dimensions**


	Hole size	Socket size
10-2200-(-)	1 1/16"	20 mm
10-2200IMP:	1 1/16"	1/2"
10-2100-(-)	1 11/16"	32 mm
10-2100IMP:	1 11/16"	1"

**Important**

Follow the directions for installation and connection. We reserve the right to change the product and the manual without notice.

**Installation**

1. Before drilling a hole for air control, make sure the surface is flat, this will help assure the best seal.
2. Drill a hole according to recommended hole size.
3. Remove nut (4) and gasket (3) from air control.
4. Place silicone on backside of flange of air control body and install air control through hole in tub/spa.
5. Place gasket (3) onto body (2) on the outside of the tub/spa.
6. Hand tighten nut (4) onto body (2).
7. Remove excess silicone from around flange of air control and surface of tub/spa.
8. Glue appropriate size hose onto bottom of air control.

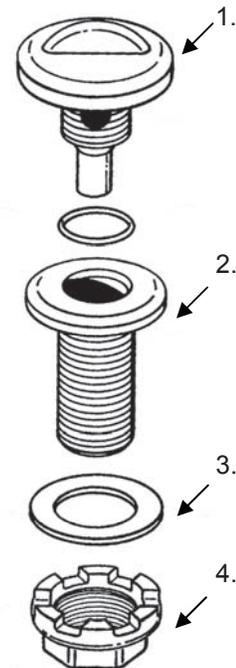

**Warning**

Do not use any type of petroleum based lubricant, they will damage the product.

## RÉGLAGES D'ADMISSION D'AIR 10-2100-(-)(IMP) & 10-2200-(-)(IMP)

### Matériaux

ABS blanc/ABS gris/ABS chromé

### Dimensions


	Diamètres de perçage conseillés	Taille de l'adaptateur
10-2200-(-) :	1 1/16"	20 mm
10-2200IMP:	1 1/16"	1/2"
10-2100-(-):	1 11/16"	32 mm
10-2100IMP:	1 11/16"	1"

### Important

Veillez suivre le mode d'emploi pour le montage et les branchements. Nous nous réservons tout droit de modification sans préavis.

### Installation

1. Avant de percer un trou pour la régulation d'air, assurez-vous que la surface est plane, afin d'assurer une étanchéité optimale.
2. Percez un trou conformément au diamètre recommandé.
3. Otez l'écrou (4) et le joint d'étanchéité (3) de la régulation d'air.
4. Appliquez de la silicone au dos de la bride du corps de la régulation d'air et installez cette dernière dans la baignoire/le spa via le trou.
5. Placez le joint d'étanchéité (3) sur le corps (2) à l'extérieur de la baignoire/du spa.
6. Serrez l'écrou (4) à la main sur le corps (2).
7. Otez l'excédent de silicone autour de la bride de la régulation d'air et sur la surface de la baignoire/du spa.
8. Collez un tuyau de taille appropriée au fond de la régulation d'air.

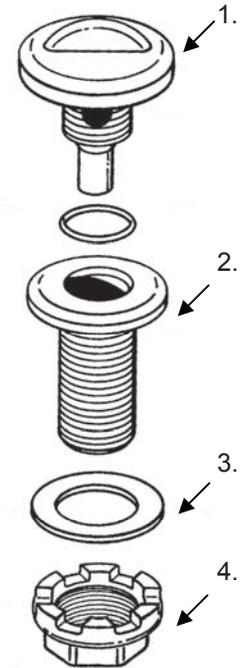

### Avertissement

N'utilisez aucun type de lubrifiant à base de pétrole, faute de quoi vous risquez d'endommager le produit.