



Cable Drive Waste & Overflow

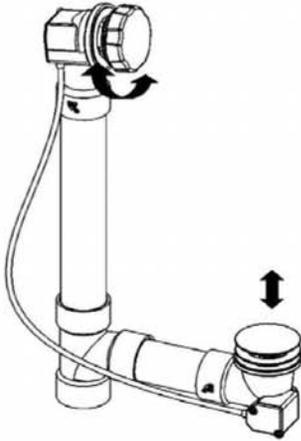

- Adjustable To Fit
All Standard
- Tubs Chrome Plated
Face Plate &
POP-UP
- Turn Overflow Plate
To Close Or OP-UP
To Drain

This waste & overflow is designed for easy installation with no special tools.
Please read our step-by-step instructions carefully before installing
your new waste & overflow.

Part No. 39027PC:
27" Cable Drive, Waste & Overflow

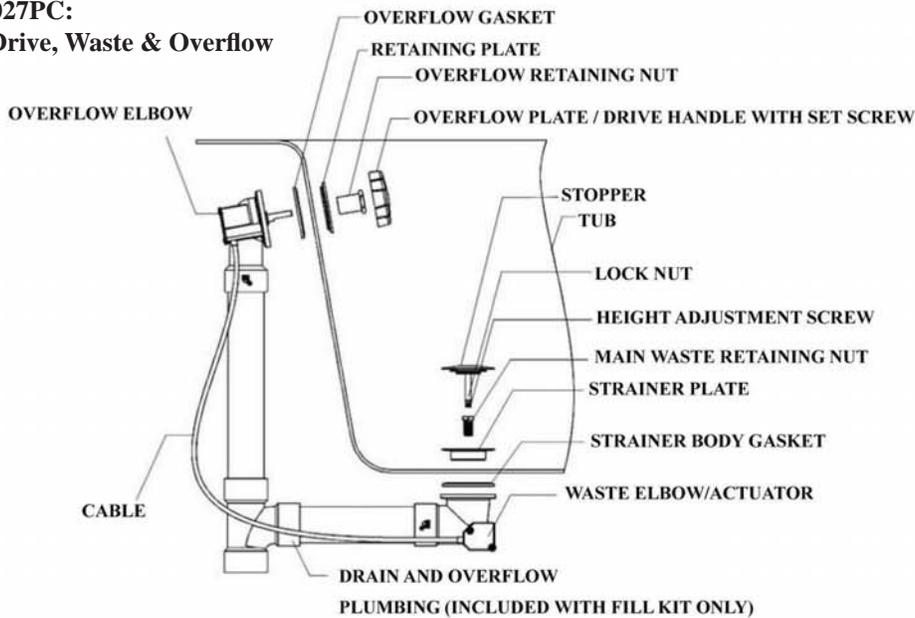

1. INSTALL CABLE ON THE WASHER ELBOW/ACTUATOR AND OVERFLOW ELBOW.
2. DRY FIT THE PLUMBING BEFORE FINAL ASSEMBLY TO MAKE SURE THAT THE PIPE LENGTHS ARE CORRECT.
3. ASSEMBLE KIT AS SHOWN. (USING GLUE APPROPRIATE TO LOCAL CODES) TIGHTEN NUTS.
4. INSTALL OVERFLOW ELBOW W/GASKET. SECURE TO TUB WITH RETAINING PLATE AND NUT. INSTALL COVER PLATE AND SECURE WITH SET SCREW.
5. INSTALL WASTE ELBOW W/GASKET. SECURE TO TUB WITH STRAINER PLATE AND NUT.
6. ADJUST STOPPER HEIGHT TO ENSURE PROPER ACTIVATION. SECURE HEIGHT G/G ADJUSTER WITH LOCK NUT INSTALL.