

# INTRODUCING

The NEW Slimline® Jet Collection



## **Slimline® Manual**

The latest in our NEW Hydromassage bath jets

- Easy to install and service
- NEW stylish look and modern design
- Stainless steel and chrome-plated ABS
- NEW flush to the shell and unobtrusive
- NEW ultra low profile and smooth to the touch



**BALBOA**  
water group



## THE SLIMLINE® COLLECTION INCLUDES

Hydromassage side and back jets, air jets,  
suction and pneumatic button

A perfect match to our LED buttons and Slimlites

# SLIMLINE® JET COLLECTION

## Slimline Air Massage



### Installation of Slimline Air Massage

**Tool Use:** Standard  $\frac{7}{16}$ " hex (Allen) wrench

Use only silicone that is compatible with ABS and PVC plastic.


Make sure mounting surface is flat. The air jet face must sit flush with the mounting surface to prevent any gaps between the cover and the wall.

Installation of the Slimline Air Massage Jet requires a  $\frac{7}{32}$ " (5.5 mm) hole.

1. Drill the hole. Insert the multi jet into the hole. Slide the gasket over the air jet until the gasket rests against the spa wall. Apply silicone. Avoid putting silicone towards the front of the wall fitting as indicated in the diagram.
2. While holding the jet assembly against the spa, screw the body onto the jet face threads. Then, hand tighten.

**Caution:** Do not use abrasive or caustic cleansers on decorative escutcheons as they will damage the finish and void the warranty.

### Silicone Instructions

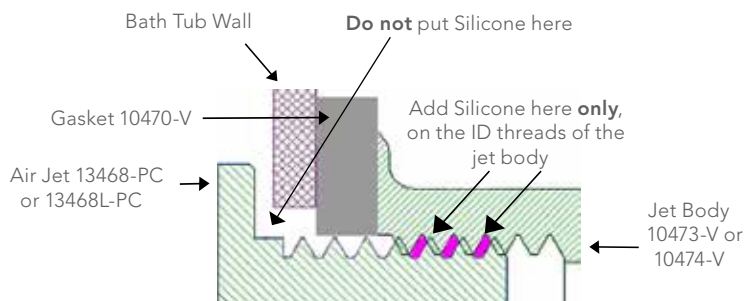


### SLIMLINE JET COLLECTION 0916


©2016 Balboa Water Group. All rights reserved. Your Single Source Solution.

1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com


Balboa Water Group reserves the right to change technical data without further notice.

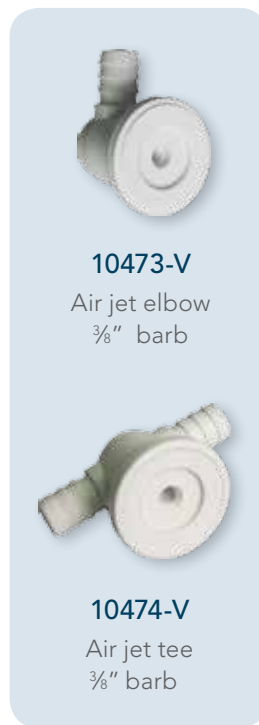

### Size Measurements

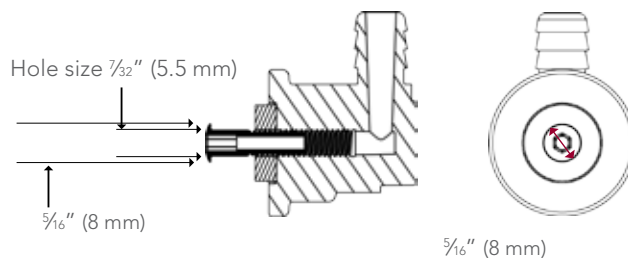

### Minimum and Maximum Bath Tub Wall Thickness

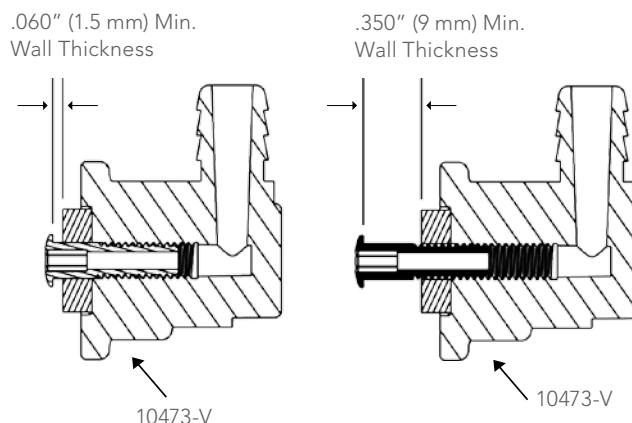

# SLIMLINE® JET COLLECTION

## Slimline Air Massage



**10471-V**  
Air jet elbow  
3/8" barb



**10472-V**  
Air jet tee  
3/8" barb



**10470-V**  
Gasket



**102300-PC**  
**102300-WH**

Air jet multi hole,  
3/4" (19 mm),  
thread length  
1 3/16" (21 mm)



**102300L-PC**  
**102300L-WH**

Air jet multi hole long  
version, 3/4" (19 mm),  
thread length  
1 1/2" (41.2 mm)

### Installation of Slimline Air Massage

Use only silicone that is compatible with ABS and PVC plastic.


Make sure mounting surface is flat. The air jet face must sit flush with the mounting surface to prevent any gaps between the cover and the wall.

Installation of the Slimline Air Massage Jet requires a 9/16" (14 mm) hole.

1. Drill the hole. Insert the multi jet into the hole. Slide the gasket over the air jet until the gasket rests against the spa wall. Apply silicone. Avoid putting silicone towards the front of the wall fitting as indicated in the diagram.
2. While holding the jet assembly against the spa, screw the body onto the jet face threads. Then, hand tighten.


**Caution:** Do not use abrasive or caustic cleansers on decorative escutcheons as they will damage the finish and void the warranty.

### Size Measurements

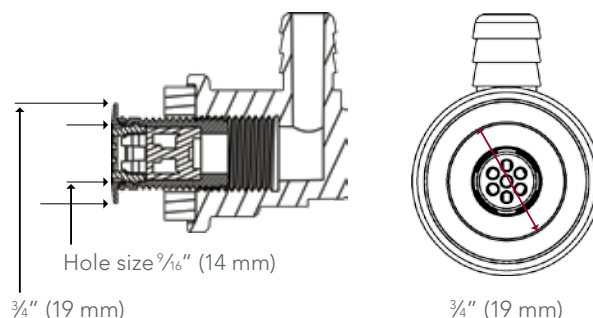


### Minimum and Maximum Bath Tub Wall Thickness


.060" (1.5 mm) Min.  
Wall Thickness

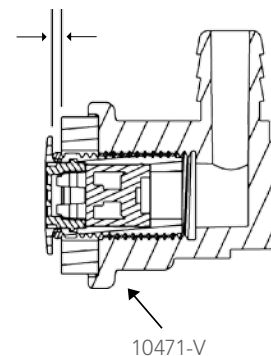

.350" (9 mm) Min.  
Wall Thickness

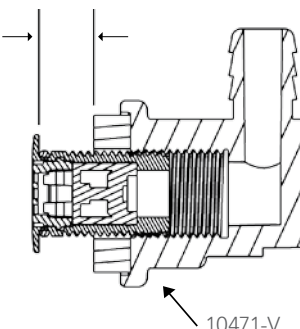

### Silicone Instructions

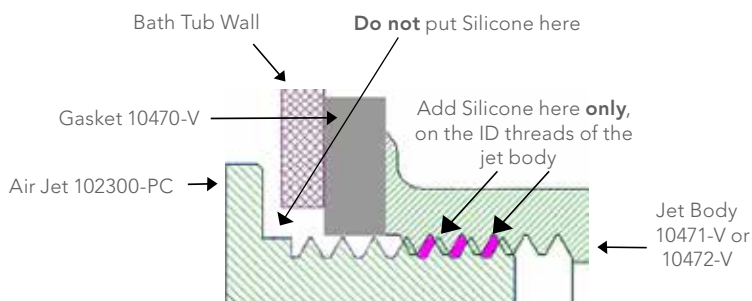

### SLIMLINE JET COLLECTION 0916

©2016 Balboa Water Group. All rights reserved. Your Single Source Solution.


1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com

Balboa Water Group reserves the right to change technical data without further notice.

**BALBOA**  
water group

# SLIMLINE® JET COLLECTION

Slimline Air Massage

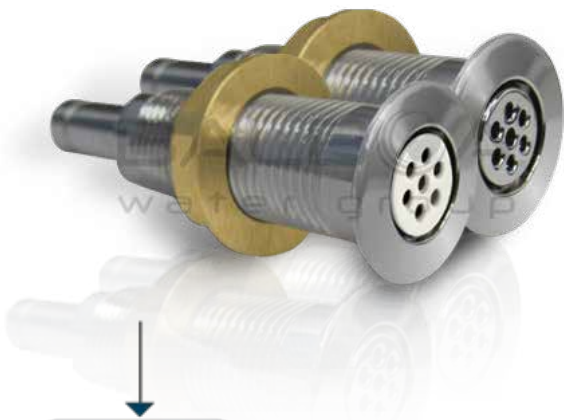

## Slimline Air Jet Quick Connect Ø19mm/.75"

Material No. 102400-PC  
Chrome plated brass, chrome plated ABS


Material No. 102400-WH  
Chrome plated brass, white ABS



## Hole Size

Hole Size: 14mm/.55"  
Tool: Standard spanner

- Integrated high quality check valve
- Includes O-ring

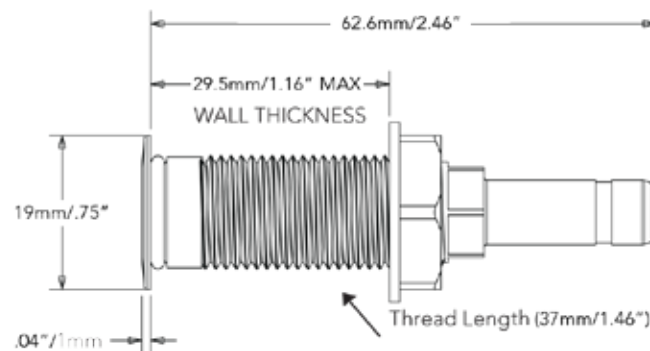

SLIMLINE JET COLLECTION 0916

©2016 Balboa Water Group. All rights reserved. Your Single Source Solution.

1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com

Balboa Water Group reserves the right to change technical data without further notice.

**BALBOA**  
water group

# SLIMLINE® JET COLLECTION

## Slimline Micro Back Jet



**202269-V**

V Jet x 26mm 3/8" barb

**23826-V**

1/4" Orif x 26mm smooth barb

**23834-V**

1/4" Orif elbow x 3/4" barb

**23835-V**

1/4" Orif elbow x 1/2" barb

**23836-V**

1/4" Orif elbow LH x 1/2" barb

**23838**

1/4" Orif elbow RH x 1/2" barb

**23835M**

1/4" Orif tee x 20 mm

Other sizes available, check with your sales representative for more information.



**202209**

Jet Body Micro  
3/8" Barb x 1/2" OD

**202269-V**

26mm x 3/8" B



**282201-PC**

Micro Back Jet Stamp  
Metal Escutcheon



**202201-PC**

**202201-WH**  
Micro Jet Front  
Chrome 1 1/2"



**202204**

Gasket for 202209

**202206**

Gasket for 202269-V

### Installation of Slimline Micro Back Jet Assembly


- Tool Required: 3/8" Allen (Hex) Wrench
- Use only silicone that is compatible with ABS and PVC plastic.
- Make sure mounting surface is flat. The suction cover and fitting must sit flush with the mounting surface to prevent any gaps between the cover and the wall. Installation of the Slimline Micro Back Jet Assembly requires a 1 1/8" hole.

1. Once the hole is drilled, insert the Slimline Back Jet Micro 1 1/2" Wall Fitting (202209WF) into the escutcheon ring (282201-PC). Insert the fitting into the hole. Apply silicone as shown in the "Silicone Instructions" diagram. Avoid putting silicone towards the front of the wall fitting.


2. Screw the assembly into the jet body. Use the Allen Wrench to snug the assembly into the jet body.

**Caution:** Do not use abrasive or caustic cleansers on decorative escutcheons as they will damage the finish and void the warranty.

### Silicone Instructions

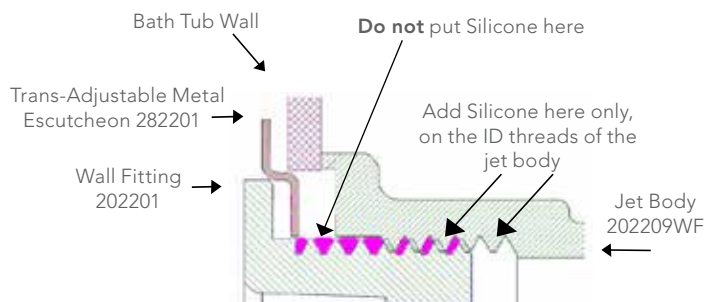


### Size Measurements

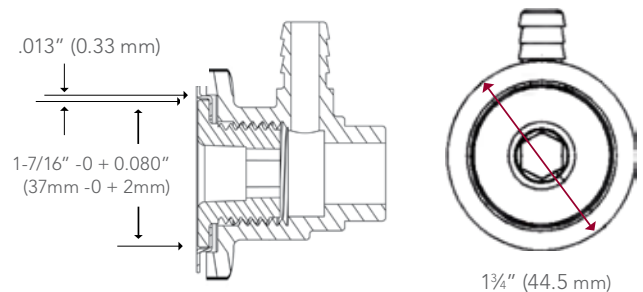


### Minimum and Maximum Bath Tub Wall Thickness

.060" (1.5 mm) Min.  
Wall Thickness

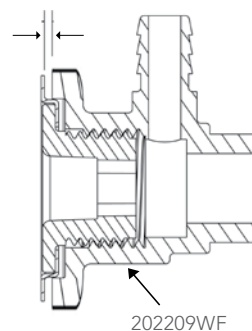

.230" (5.8 mm) Min.  
Wall Thickness

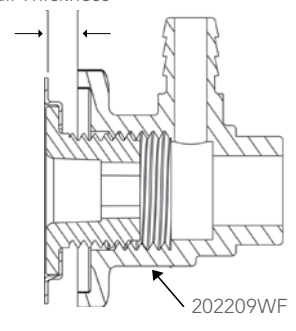

SLIMLINE JET COLLECTION 0916

©2016 Balboa Water Group. All rights reserved. Your Single Source Solution.

1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com

Balboa Water Group reserves the right to change technical data without further notice.

**BALBOA**  
water group

# SLIMLINE® JET COLLECTION

Slimline Flow-Adjustable Directional Eyeball and Swirl Jets




**202310**  
Jet Body 1" x 1/2" ID

**202520A**  
Jet Body 1" S x 3/8" B

**202312A-CL**  
Jet Body 1 x 1/2 0.187 Orif



**282301-PC**  
**282301-WH**  
Slimline Ring

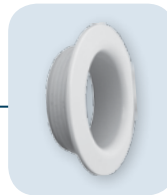


**202306**  
Wall Fitting  
**202306-CL**  
Wall Fitting Clear



**202309**  
Gasket for 202520A

**202314**  
Gasket for 20295-V

**202318**  
U Shape Gasket for 202520A

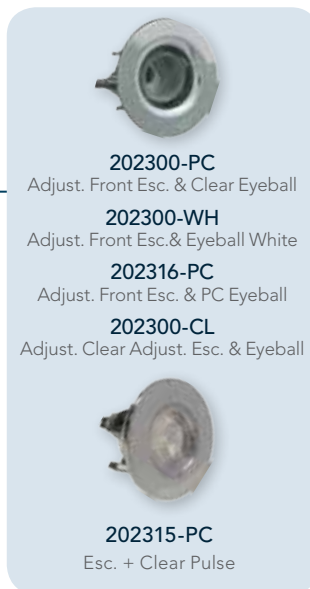

**202300-PC**  
Adjust. Front Esc. & Clear Eyeball

**202300-WH**  
Adjust. Front Esc. & Eyeball White

**202316-PC**  
Adjust. Front Esc. & PC Eyeball

**202300-CL**  
Adjust. Clear Adjust. Esc. & Eyeball




**202315-PC**  
Esc. + Clear Pulse

## Installation of Slimline Jet Assembly


- Tool for wall fitting (202308)
  - Use only silicone that is compatible with ABS and PVC plastic.
  - Make sure mounting surface is flat. The suction cover and fitting must sit flush with the mounting surface to prevent any gaps between the cover and the wall. Installation of the Slimline Jet Assembly requires a 2" hole.
1. Once the hole is drilled, insert the Wall Fitting into the Metal Stamp Escutcheon, and insert the assembly through the hole.
  2. Apply silicone as shown in the "Silicone Instructions" diagram. Avoid putting silicone towards the front of the wall fitting as indicated in the diagram. Screw, then tighten the escutcheon and wall fitting assembly into the jet body.
  3. Snap the Front Jet Escutcheon & eyeball (202300-PC or 202315-PC) carefully into the wall fitting.

**Caution:** Do not use abrasive or caustic cleansers on decorative escutcheons as they will damage the finish and void the warranty.


## Silicone Instructions

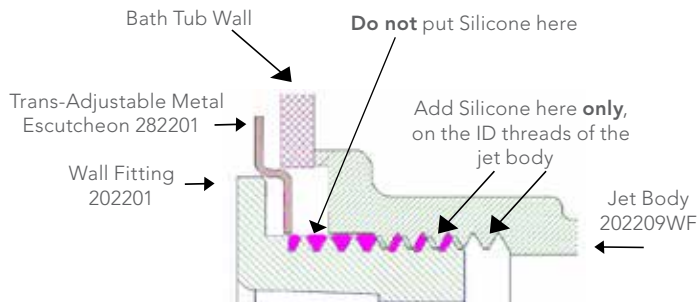

## Size Measurements

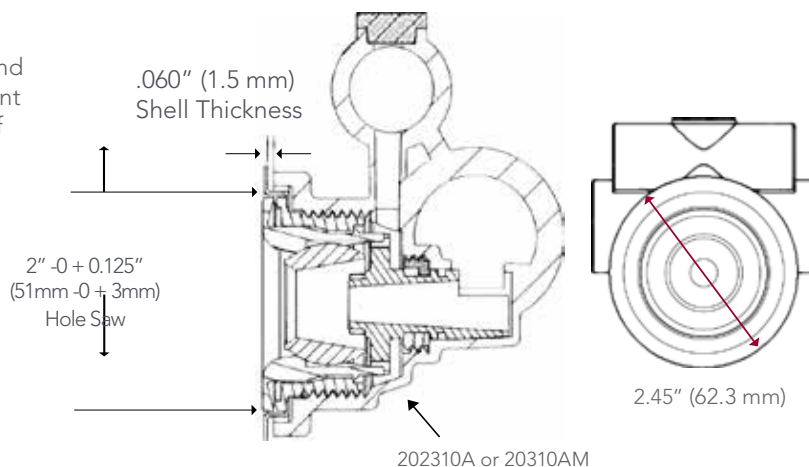

## Minimum and Maximum Bath Tub Wall Thickness

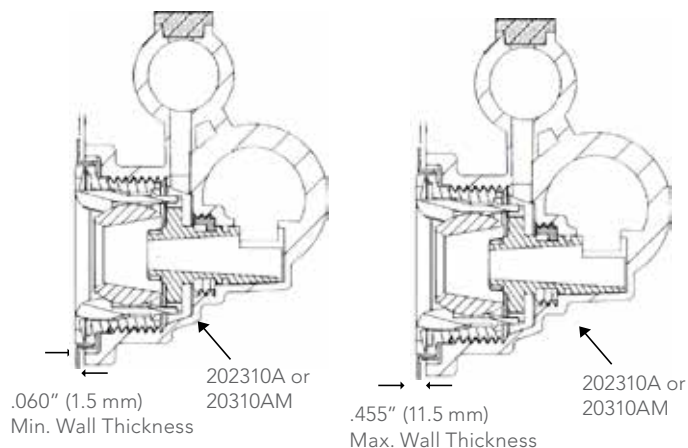

## SLIMLINE JET COLLECTION 0916

©2016 Balboa Water Group. All rights reserved. Your Single Source Solution.  
1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com

Balboa Water Group reserves the right to change technical data without further notice.

**BALBOA**  
water group

# SLIMLINE® JET COLLECTION

## Large Trans-Adjustable Jet



**202410**  
Jet Body 1/2" x 1" ID

**202410M**  
Jet Body 20 x 32 mm ID

**202412M**  
V-jet 32 mm ID



**282401-PC**  
**282401-CW**  
Slimline  
Trans-Adjustable  
Metal Escutcheon



**202401-PC**  
**202401-CW**  
Slimline  
Trans-Adjustable  
Wall Fitting



**202450-PC**  
**202450-CW**  
Star Grip Internal 0.330"  
Orifice Chrome




**202452-PC**  
Internal round  
grip 0.330"  
Orifice Chrome

### Installation of Slimline Large Transadjustable Jet


- Tool Required: 22556-V  
Installation Tool Internal: 22556-V opposite end
  - Use only silicone that is compatible with ABS and PVC plastic.
  - Make sure mounting surface is flat. The metal and wall fitting must sit flush with the metal surface. Installation of the Slimline Large Transadjustable Jet requires a 2 3/4" hole.
1. Once the hole is drilled, place escutcheon onto the wall fitting (202401-PC) and insert the assembly into the hole.
  2. Apply silicone as shown in the "Silicone Instructions" diagram. Avoid putting silicone towards the front of the wall fitting. Screw the wall fitting into the jet body, then tighten using tool #22556-V.
  3. Insert the internal orifice (202450-PC or 202452-PC) carefully within the assembly, then screw into place. To avoid stripping threads, hand tighten the internal orifice assembly until it bottoms out. Then use tool # 22556-V to snug the orifice into place.

**Caution:** Do not use abrasive or caustic cleansers on decorative escutcheons as they will damage the finish and void the warranty.


### Silicone Instructions

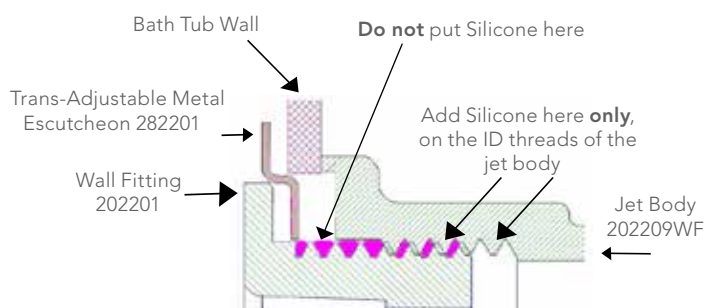

### Hole Size Measurement

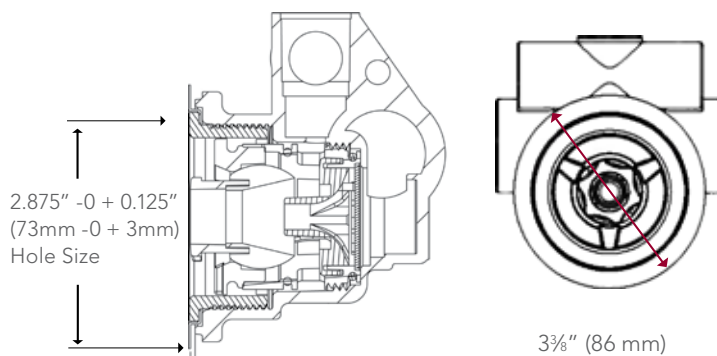

### Minimum and Maximum Bath Tub Wall Thickness

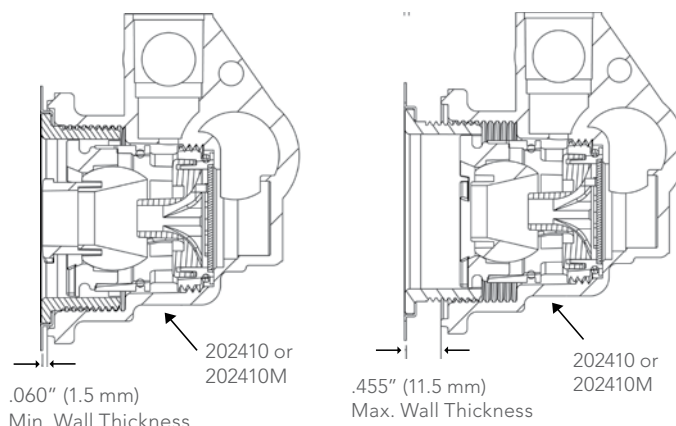

### SLIMLINE JET COLLECTION 0916

©2016 Balboa Water Group. All rights reserved. Your Single Source Solution.  
1382 Bell Avenue | Tustin, CA 92780 | p 714.384.0384 | www.balboawater.com  
Balboa Water Group reserves the right to change technical data without further notice.

**BALBOA**  
water group

# Balboa

Water Group World-Wide

BALBOA WATER GROUP  
[www.balboawater.com](http://www.balboawater.com)

Corporate Office, Tustin, California  
**Electronic Manufacturing**  
1382 Bell Avenue  
Tustin, California 92780  
P 714.384.0384  
F 714.384.0385

Valencia, California  
**Whirlpool Spa and Bath Manufacturing**  
28545 Livingston Avenue  
Valencia, California 91355  
P 714.384.0384  
F 714.384.0385

Varde, Denmark  
**European Sales Division**  
Roustvej 50  
DK-6800 Varde, Denmark  
P +45.75.22.46.88  
F +45.75.22.52.45

Melbourne, Australia  
**Australian Sales Division**  
P 1.800 137 879  
F 1.800 0703 233

