### **EL2001 Hot Sheet**

# System PN 53323\_01 (Mach 2) Balboa Instruments

System Model # EL2-EL2001-YCAH


Base PCBA PN EL2001 – 53414

Base Panels
ML 700 – PN 52649
ML 900 – PN 52654


The ML 200 and ML 400 Panels are compatible, but may require Aux panels for adequate functionality.



# **Circuit Board Configuration**

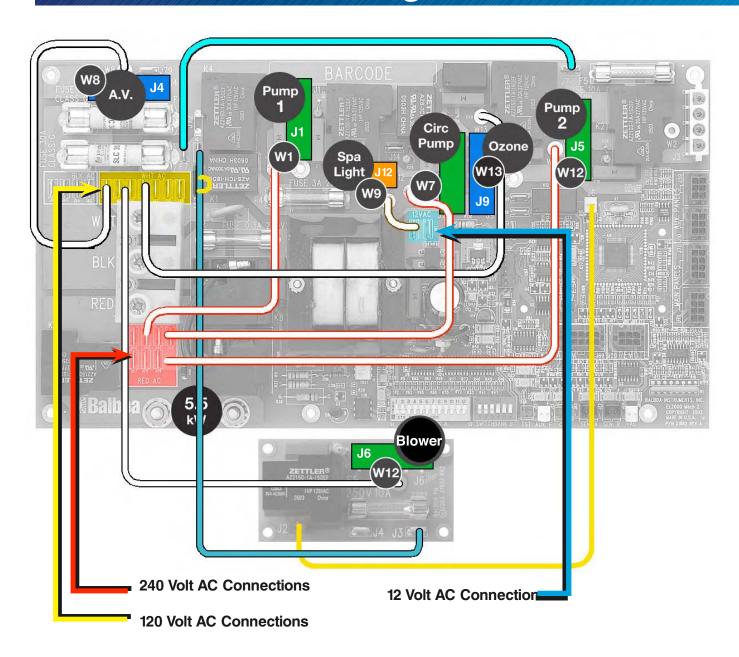

## **Circuit Board Layout**

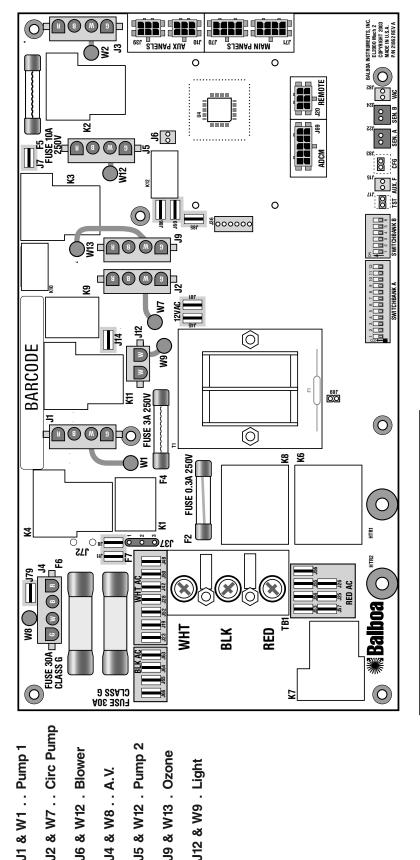

J5 & W12 . Pump 2

J9 & W13 . Ozone

J12 & W9 . Light

J6 & W12 . Blower


J4 & W8 . . A.V.

J1 & W1 .. Pump 1

Optional Aux Relay Board 120V (W12 - J50)


J3 to Black AC on Main Board (J11)

J to J60 on Main Board (EXT - near Swtichbank A)

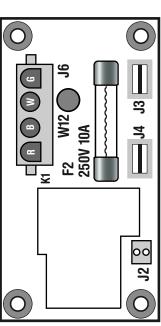

### **DIP Switches and Jumpers**

#### Switchbank A

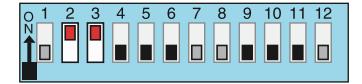

A1, Test Mode OFF

A2, High Amp

A3, Filter by Duration A9/A10,

A4, 12 Hr Time

A5, Degrees F

A6, Short Timeouts

A7, Cleanup Cycle OFF


A8, 1Hr O3 Disable OFF

**No Circ Pump** 

A11, O<sub>3</sub> w/P1 low

A12, Memory ON

Switchbank B

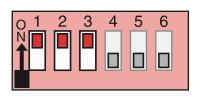

B1, Pump 2 1-Speed

B2, Pump 2 Enabled

**B3, Blower Enabled** 

**B4, No Fiber/Wheel** 

**B5**, N/A

**B6, Panel Scrunching OFF** 

**A9** 

A10

#### **DIP Switch Key**

Α	1	Test Mode (normally Off)
Α	2	In "ON" position, all high-s

speed pumps/blower can run with Heater ..... In "OFF" position, no high-speed pumps or blower can run with Heater

3 . . . . . . . . . . In "ON" position, filter cycles are programmed by duration as opposed to start and end times

4 . . . . . Displays time in 24 hours (military time) – in ON position.

Displays 12 hour time when OFF

5 . . . . . Celsius (ON) or Fahrenheit (OFF) Temperature Display

6 . . . . . . . . Pump timeout settings (15 minutes / 2 hr for P1 low (Off) or

30 minutes / 4 hr for P1 low (On)

7 . . . . . . . . Cleanup Cycle – 30 min after spa use/timeout,

P1-low & Ozone run for 1 hour.

A 8 . . . . . Ozone Suppression for one hour after pump/blower button press

A9 and A 10 . . . . . . See Figure 2 for Circ Pump Behavior settings

A 11 ..... Ozone in Filter Cycle only (non-circ mode)

One-Speed Pump 1 (in any circ mode) -

(Refer to Figure 2)

A 12 ..... Persistent memory reset OFF **OFF** No Circ Pump (used when spa is powering up) **OFF** 24 Hr ON OFF ON 24 Hr w/3° Shut-Off 1 . . . . . . . . . Single-speed Pump 2 ON ON Acts like P1 low B 2 . . . . . Pump 2 Enable (Filter Cycles, Polls) 3 . . . . . . . . Blower Enable with pump 2 low relay

Figure 2

Circ Pump

**Behavior** 

J37

5 . . . . . . Pump 3 enable (Jets 3 replaces blower on Aux panel) B 6 . . . . . . . . . ML 900 scrunching - ML550 / 700 Jets 3 replaces Blower

4 . . . . . fiber and Wheel instead of Spa Light (non-circ only)

J37 Jumper on Pin 1 and 2 will power one leg of J9 (Spa Light) at 120 Volts AC.

Jumper on Pin 2 and 3 will power one leg of J9 (Spa Light) at 12 Volts AC.

Note: W9 controls voltage on the other leg of J9 and must be set for the same voltage.

### **Ozone Connections**

First, configure the EL Circuit Board to deliver the desired voltage to the on-board connector (J9). Connect the W-13 wire to either White AC (120V) or Red AC (240V) to set the voltage.

The pin next to ground determines voltage on these connectors. Ground is typically the bottom pin of the white connector (if the flat sides of the top and bottom holes are to the left and the heater connections are on the bottom edge of the board).

The pin next to the bottom (ground) pin of J9 is fed by W-13 and sets the voltage in the connector.


If the board is set up to operate a 120V ozone generator, the connector on the ozone generator is likely to be configured correctly, but should be compared to the illustration below.

If a 240V ozone generator is required, be sure the red wire in the ozone cord is positioned in the connector next to the green ground wire as described below.

Note: A special tool is required to remove the pins from the connector body once they are snapped in place. Check with your Balboa Account Manager for information on purchasing a pin-removal tool.


#### Ozone connector configuration for 120V 60Hz

Black conductor
Use this slot for the leftover Red conductor
Install the White conductor here for 120V ozone
Green conductor

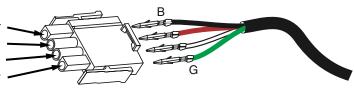


#### Ozone connector configuration for 240V 60Hz

Black conductor
Use this slot for the leftover White conductor
Install the Red conductor here for 240V ozone
Green conductor

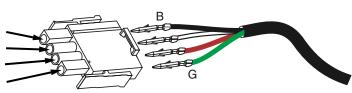

### **Panel Configuration**

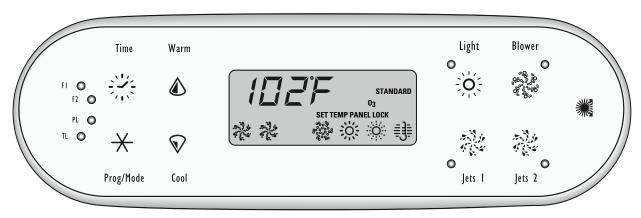

ML 700 PN 53649



ML 400 PN 52684



ML 200 PN 52958



ML 900 PN 52654

#### Auxiliary panels are available in the following configurations:

Infrared Remote (Dolphin) which has a separate connector on the board.

- 4-Button
- 2-Button
- 1-Button

Configuration of the 4-Button and 2-Button Aux Panels can be done for custom applications.

1-button Aux panels are available in 4 different versions.

There are two Aux Panel connectors on the board.

#### Panel "Scrunching" on the ML 900 (requires custom panel overlays)

With DIP switch B6, unused buttons on an ML 900 can be "scrunched" in a custom configuration or the unused positions can be left blank.

Scrunching moves the buttons in a counter-clockwise direction from the bottom row to the top row, on the right side of the display. The result is that all missing buttons or gaps appear on the bottom row, just to the right of the display.

Note: Some button positions MUST be used in order to perform certain functions. For instance, the Jets 2 button and the Blower button are used in certain button press combinations, and need to be available to a user, even if they are labeled with a different name.

See reference cards for details.