### **BP600 Tech Sheet**

### **Balboa Water Group**

System Part Numbers: 56281 3kW 800 Incoloy Heater Element

3kW 825 Incoloy Heater Element3kW Titanium Heater Element

CE System Model: BP16-BP600-RCA-3.0KW

Software ID: M100\_205 V6

Software Version: 6.0

Hex File: BP1600\_6.0\_BP16TP4.hex

Configuration Signature: EDD8C3A4

Eng. Project: 3833

Base PCBs / PCBA's:

Power Board: 22117\_B / 56284 Logic Board: 22121\_E / 56131-02

Control Panels:

TP600CE 50014-01
TP600 (non-CE) should not be used
Software Version 2.3 and later

TP400T 50260

Software Version 2.4 and later


TP400W 50259

Software Version 2.4 and later

**Auxiliary Panels** 

AX10A2 55919



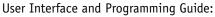

http://service.balboa-instruments.com/zz40940\_download.zip



# **System Revision History**

Part #	EPN	Date	Originator	Changes Made
56281	3833	02-01-13	Balboa	Initial Generic Configuration
56282				Based on 56129-01
56283				



## Setup 1-16 - As Manufactured

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 16A, (Circuit Breaker rating = 20A max.)

#### System Ouputs - 16A Service:

Pump 1 230VAC 2-Speed 7.5A max 30-minute timer for Low Speed, 15 Minutes for High Speed

This is the heater pump

Must deliver a minimum of 20 GPM through heater

Low Speed may not exceed 2A max


Pump 2 230VAC 1-Speed 7.5A max 15-minute timer

Ozone 230VAC .5A max Uses the same relay as Pump 1 Low

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

#### Wiring Diagram and Settings

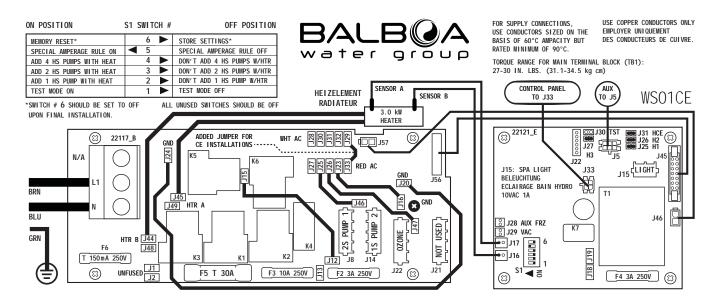

### **DIP Switch Option**

Orig. Setup 1

Changes to

Special Amperage Rule ON........... DIP Switch 5 OFF........DIP Switch 5 ON

Use this only in cases where there is an overcurrent condition due to pump size.

This setting will not allow Pump 1 High and Pump 2 to run at the same time.



### **Setup 1-32**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 32A, (Circuit Breaker rating = 40A max.)

### System Ouputs - 32A Service:

Pump 1 230VAC 2-Speed 12A max 30-minute timer for Low Speed, 15 Minutes for High Speed

This is the heater pump

Must deliver a minimum of 20 GPM through heater

Pump 2 230VAC 1-Speed 12A max 15-minute timer


Ozone 230VAC .5A max Uses the same relay as Pump 1 Low

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

Misc. J2 & J32 230VAC 4A max Hot output (Stereo). Fused equipment or in-line fuse required.

#### Wiring Diagram and Settings

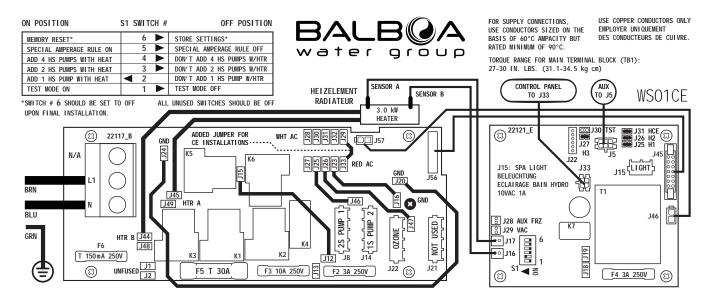

### **Configuration Changes based on Default**

Feature Orig. Setup 1 Changes to J2 & J32 ...... Hot Output ...... Useable DIP Switch Option Orig. Setup 1 Changes to

Add 1 High Speed Pump with Heat . . . . . DIP Switch 2 OFF . . . . . . . . DIP Switch 2 ON



### Setup 2-16

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1b, 16A, (Circuit Breaker rating = 20A max.)

#### System Ouputs - 16A Service:

Pump 1 230VAC 1-Speed 6.5A max 15-minute timer Pump 2 230VAC 1-Speed 6.5A max 15-minute timer

Circ Pump 230VAC 1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump


Must deliver a minimum of 20 GPM through heater

Ozone 230VAC .5A max Uses the same relay as the Circ Pump

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

### Wiring Diagram and Settings

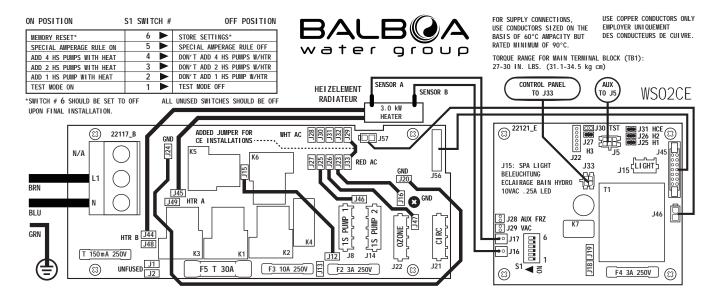

# Configuration Changes based on Default Feature Orig. Setup 1 Changes to



### **Setup 2-32**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1b, 32A, (Circuit Breaker rating = 40A max.)

#### System Ouputs - 32A Service:

Pump 1 230VAC 1-Speed 12A max 15-minute timer Pump 2 230VAC 1-Speed 12A max 15-minute timer

Circ Pump 230VAC 1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump

Must deliver a minimum of 20 GPM through heater


Ozone 230VAC .5A max Uses the same relay as the Circ Pump

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

Misc. J2 & J32 230VAC 3A max Hot output (Stereo). Fused equipment or in-line fuse required.

### Wiring Diagram and Settings

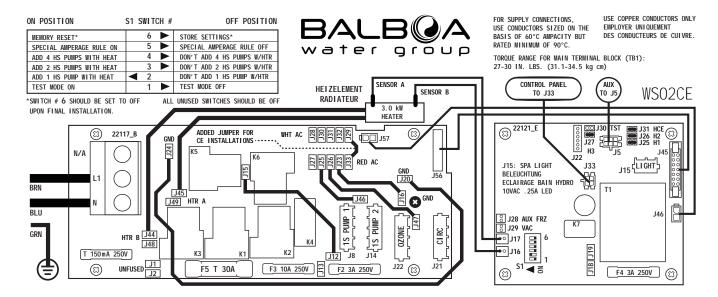

# Configuration Changes based on Default Feature Orig. Setup 1 Changes to

**DIP Switch Option** 

Add 1 High Speed Pump with Heat . . . . . DIP Switch 2 OFF . . . . . . . DIP Switch 2 ON



### **Setup 3-16**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1b, 16A, (Circuit Breaker rating = 20A max.)

### System Ouputs - 16A Service:

Pump 1 230VAC 2-Speed 10A max 30-minute timer for Low Speed, 15 Minutes for High Speed

This is the heater pump

Must deliver a minimum of 20 GPM through heater

Low Speed may not exceed 2A max


Blower 230VAC 1-Speed 4A max 15-minute timer

Ozone 230VAC .5A max Uses the same relay as Pump 1 Low

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

#### Wiring Diagram and Settings

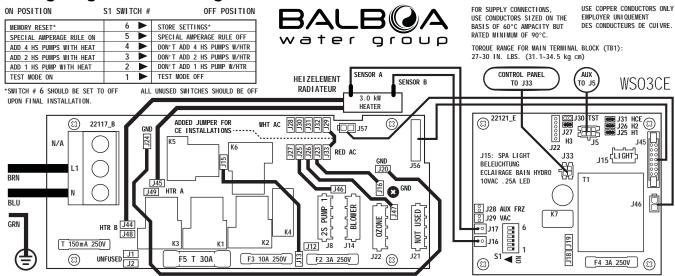

# Configuration Changes based on Default Feature Orig. S

Feature Orig. Setup 1 Changes to

J14, TP600 Button 2, TP400 Button 4, LED 2, AX10A2..... Pump 2 ..... Blower



### **Setup 3-32**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 32A, (Circuit Breaker rating = 40A max.)

#### System Ouputs - 32A Service:

Pump 1 230VAC 2-Speed 12A max 30-minute timer for Low Speed, 15 Minutes for High Speed

This is the heater pump

Must deliver a minimum of 20 GPM through heater

Blower 230VAC 1-Speed 4A max 15-minute timer


Ozone 230VAC .5A max Uses the same relay as Pump 1 Low

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

Misc. J2 & J32 230VAC 3A max Hot output (Stereo). Fused equipment or in-line fuse required.

### Wiring Diagram and Settings

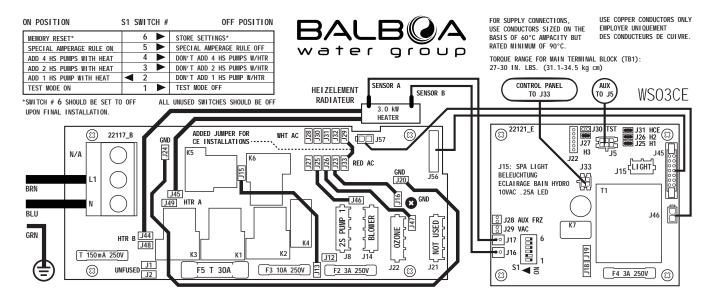

### **Configuration Changes based on Default**

Feature	Orig. Setup 1	Changes to
J14, TP600 Button 2, TP400 Button 4, LED 2, AX10A2	. Pump 2	Blower
J2 & J32	Hot Output	Useable
DIP Switch Option		
Add 1 High Speed Pump with Heat	DIP Switch 2 OFF	DIP Switch 2 ON



### **Setup 4-16**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1b, 16A, (Circuit Breaker rating = 20A max.)

#### System Ouputs - 16A Service:

Pump 1 230VAC 1-Speed 8A max 15-minute timer Blower 230VAC 1-Speed 4A max 15-minute timer

Circ Pump 230VAC 1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump


Must deliver a minimum of 20 GPM through heater

Ozone 230VAC .5A max Uses the same relay as the Circ Pump

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 4kW @ 240VAC

### Wiring Diagram and Settings

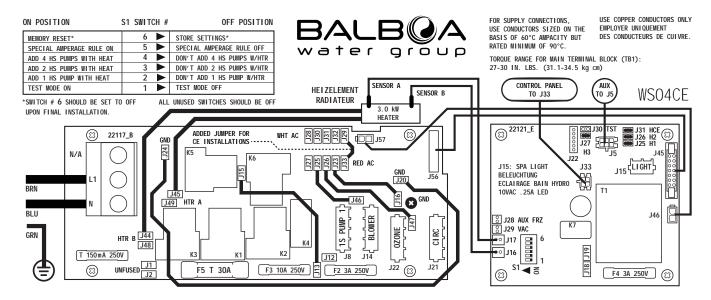

## **Configuration Changes based on Default**

reature	orig. Setup 1	changes to
J8	2-Speed Pump 1 $\dots$	1-Speed Pump 1
J14, TP600 Button 2, TP400 Button 4, LED 2, AX10A2	Pump 2	Blower
J21	Not Used (non-circ)	Circ Pump Enabled



### **Setup 4-32**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 32A, (Circuit Breaker rating = 40A max.)

#### System Ouputs - 32A Service:

Pump 1 230VAC 1-Speed 12A max 15-minute timer Blower 230VAC 1-Speed 4A max 15-minute timer

Circ Pump 230VAC 1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump

Must deliver a minimum of 20 GPM through heater


Ozone 230VAC .5A max Uses the same relay as the Circ Pump

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 4kW @ 240VAC

Misc. J2 & J32 230VAC 4A max Hot output (Stereo). Fused equipment or in-line fuse required.

### Wiring Diagram and Settings

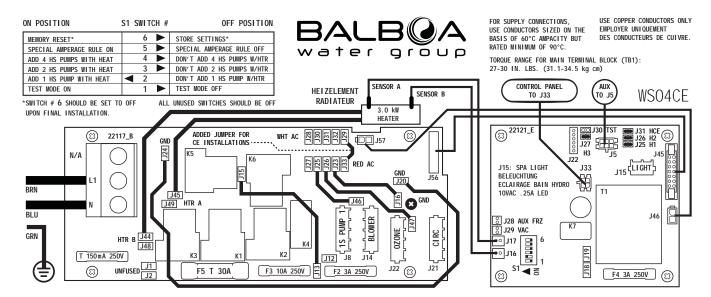

# Software Configuration Changes based on Default Feature Orig. Setup 1

	- J · · J.	- · J
J8	. 2-Speed Pump 1	1-Speed Pump 1
J14, TP600 Button 2, TP400 Button 4, LED 2, AX10A2	. Pump 2	Blower
J21	. Not Used (non-circ)	Circ Pump Enabled
J2 & J32	. Hot Output	Useable



### **Setup 5-16**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1b, 16A, (Circuit Breaker rating = 20A max.)

### System Ouputs - 16A Service:

Pump 1 230VAC 2-Speed 12A max 30-minute timer for Low Speed, 15 Minutes for High Speed

This is the heater pump

Must deliver a minimum of 20 GPM through heater


Low Speed may not exceed 2A max

Ozone 230VAC .5A max Uses the same relay as Pump 1 Low

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

### Wiring Diagram and Settings

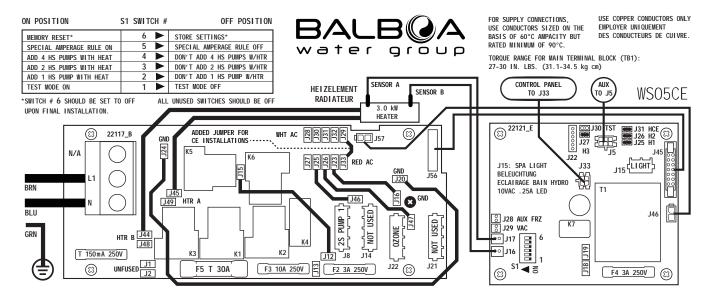

# Software Configuration Changes based on Default Feature Orig. Setup 1



### **Setup 5-32**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 32A, (Circuit Breaker rating = 40A max.)

### System Ouputs - 32A Service:

Pump 1 230VAC 2-Speed 12A max 30-minute timer for Low Speed, 15 Minutes for High Speed

This is the heater pump

Must deliver a minimum of 20 GPM through heater


Ozone 230VAC .5A max Uses the same relay as Pump 1 Low

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

Misc. J2 & J32 230VAC 4A max Hot output (Stereo). Fused equipment or in-line fuse required.

### Wiring Diagram and Settings

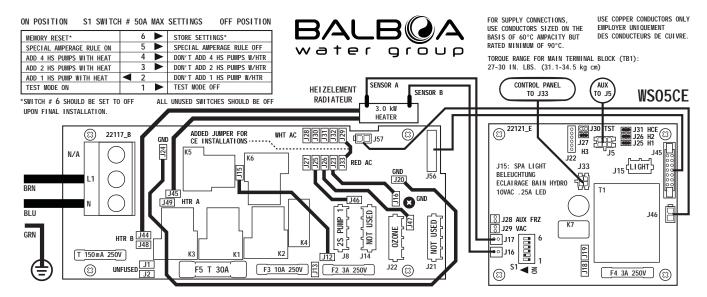

# Software Configuration Changes based on Default Feature Orig. Setup 1



### **Setup 6-16**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 16A, (Circuit Breaker rating = 20A max.)

### System Ouputs:

Pump 1 230VAC 1-Speed 12A max 15-minute timer

Circ Pump 230VAC 1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump


Must deliver a minimum of 20 GPM through heater

Ozone 230VAC .5A max Uses the same relay as the Circ Pump

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

### Wiring Diagram and Settings

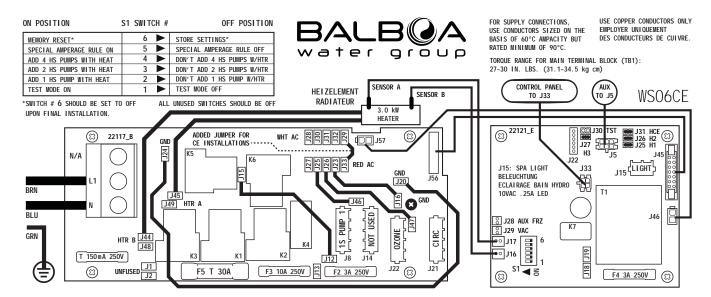

# Software Configuration Changes based on Default Feature Orig. Setup 1

g ,	•
J8	1-Speed Pump 1
J14, TP600 Button 2, TP400 Button 4, LED 2, AX10A2 Pump 2	Not Used
J21 Not Used (non-circ)	Circ Pump Enabled



### **Setup 6-32**

### **Power Requirements:**

**Single Service** [3 wires (line, neutral, ground)] 230VAC, 50Hz, 1þ, 32A, (Circuit Breaker rating = 40A max.)

#### System Ouputs:

Pump 1 230VAC 1-Speed 12A max 15-minute timer

Circ Pump 230VAC 1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump

Must deliver a minimum of 20 GPM through heater


Ozone 230VAC .5A max Uses the same relay as the Circ Pump

Spa Light 10VAC On/Off 1A max 4-Hour timer.

Heater 3kW @ 240VAC

Misc. J2 & J32 230VAC 3A max Hot output (Stereo). Fused equipment or in-line fuse required.

### Wiring Diagram and Settings

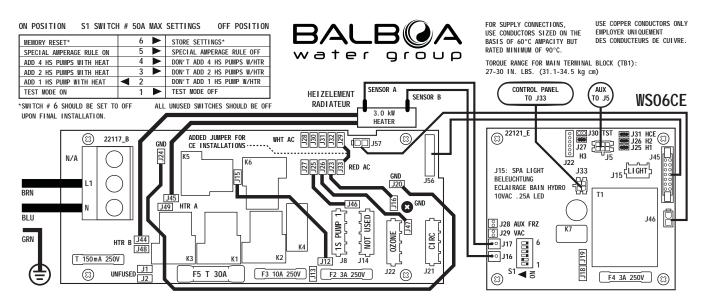

# Software Configuration Changes based on Default Feature Orig. Setup 1

J8	. 2-Speed Pump 1	1-Speed Pump 1
J14, TP600 Button 2, TP400 Button 4, LED 2, AX10A2	. Pump 2	Not Used
J21	. Not Used (non-circ)	Circ Pump Enabled
J2 & J32  DIP Switch Option	. Hot Output	Useable

Add 1 High Speed Pump with Heat . . . . . . . . . DIP Switch 2 OFF . . . . . . . . DIP Switch 2 ON



Changes to

Blue indicates changes from the original Setup 1 default

## **Setup Changes with DIP Switch 1 ON**


### Read and understand these instructions before beginning this process.

Know the Setup Number you want before you power up the spa and wait to power up the spa until you're ready to change the Setup Number.

The system must be in Test Mode, so move Switch 1 to the ON position. The Test Menu will then be available.

Power up the spa, and press any button once to Link the panel. (Note: Switch 1 can be moved to the ON position immediately after power-up, if preferred - Danger! High Voltage will be present!)

**You will have 1 minute** to complete the setup change after you manually exit Priming Mode. (Once familiar with the process, the Setup change should take less than 15 seconds.)

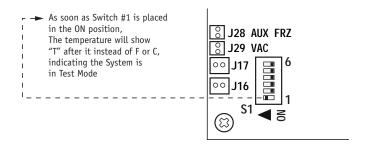

### DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

Move DIP Switch 1 (on S1 on the Logic circuit board) to ON.

The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.



When the panel displays RUN PMPS PURG AIR, press any Temperature button ONCE to exit Priming Mode. You should see "---T" where the T indicates the system is in Test Mode.



Continued on Next Page.



## **Setup Changes – Continued**

Again, You will have 1 minute to complete the setup change after you manually exit Priming Mode.

Immediately after exiting Priming Mode, press this sequence of buttons: Warm\*, Light, Warm, Warm, Warm, Warm. Continue to press Warm until the diplay shows the Setup Number (S-01, S-02, etc.) you want to switch to. When the correct setup number is showing, press Light once, and the system will reset, using the newly-selected Setup from that point on.


Key


Indicates Flashing or Changing Segment

Move DIP Switch 1 to the OFF position to take the spa out of Test Mode. °F or °C will replace °T.

Using a permanent marker, write the Setup number on the Setup label mounted inside the system lid (right). This is very important to any service person in the future who may need to replace a circuit board or system and needs to change the Setup on a replacement part while in the field.

NOTE: Changing the Setup may require wiring changes as well - refer to the wiring diagram or wiring diagram addendum.

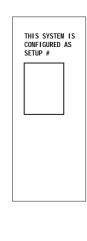

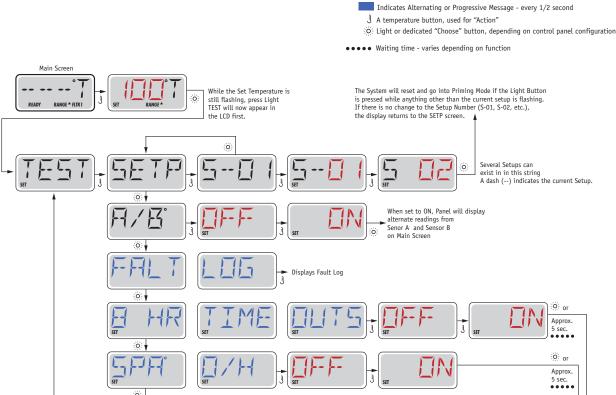

\*If the Control Panel does not have a Warm (Up) button, but rather a single Temp button, use the Temp button in place of the Warm button in the instruction above. (The flow chart assumes a single Temperature Button.)



## IT Electrical System (No Neutral)

The wiring diagram in the system show connections for TN and TT electrical services (Line, Neutral, Ground).


#### **IT Power Requirements:**

**Single Service** [3 wires (line, line, ground)] 230VAC, 50Hz, 1b, 16A/32A, (Circuit Breaker rating = 20A/40A max.)

Protective Earth Wire (Green/Yellow) must be connected to system ground terminal as marked.

All equipment (pumps, blower, and heater) runs on service line L1 with L2 acting as the return - 230VAC.

Set the DIP switches according to the wiring diagram so that total system current draw never exceeds the rated service input when using a particular setup.

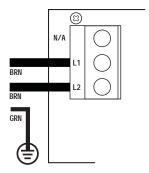


Three Service [4 wires (line, line, line, ground)] 230VAC, 50Hz, 1b, 16A/32A, (Circuit Breaker rating = 20A/40A max.)

Protective Earth Wire (Green/Yellow) must be connected to system ground terminal as marked.

All equipment (pumps, blower, and heater) runs on service line L1 with L2 acting as the return - 230VAC.

Set the DIP switches according to the wiring diagram so that total system current draw never exceeds the rated service input when using a particular setup.

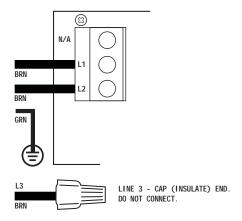



Refer to Page 3 to choose a suitable Plumbing Kit.

Blue indicates changes from the original Setup 1 default

### **General Features**

Feature	Default
Pump 1 in Filter Cycle (Circ Only)	No
Pump 1 Low Timer	30 Minutes
General Pump Timer	15 Minutes
Blower Timer	15 Minutes
Mister Timer (N/A)	15 Minutes
Light Timer	240 Minutes
Circ	Like P1 Low

Cleanup Cycle 30 Minutes

Cleaup as Preference setting Yes

Ozone With Heater Pump\*

Ozone Suppression OFF

Pump Purge 60 Seconds
Blower Purge 30 Seconds
Mister Purge (N/A) 5 Seconds



<sup>\*</sup> The Heater Pump can be either a Circ Pump or Pump 1 Low.

### **Temperature Features**

### Feature Default

Temperature Display

All temperatures must be specified in °F. The system converts °F to °C dynamically. If Celsius is required for default settings, choose a desired °C value that (after rounding) corresponds to a Fahrenheit value.

°C	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
°F	39	41	43	45	46	48	50	52	54	55	<i>57</i>	59	61	63	64	66	68	70	72
°C	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40	_
°F	72	7.	77	70	01	02	0/	06	00	00	01	0.2	0.5	0.7	00	100	100	10/	

Hi-Range Min. Set Temp	80°F
Hi-Range Max. Set Temp	104°F
Hi-Range Default Temp*	100°F
Lo-Range Min. Set Temp	50°F
Lo-Range Max. Set Temp	99°F
Lo-Range Default Temp*	70°F
Freeze Threshold	44°F

Temp Lock Type Temp + Settings

### Time Features

### Feature Default

Time Format\* 24 Hour

Filter 1 Start Hour\* 8:00 PM (20:00)

Filter 1 Duration\* 2 Hours

Filter Cycle 2 Default\* OFF

Filter 2 Start Hour\* 8:00 AM (08:00)
Filter 2 Duration\* 15 Minutes

Light Cycle Disabled
Light Cycle Default\* OFF

Light Cycle Start Hour\* 9:00 PM (21:00)
Light Cycle Duration\* 15 Minutes



<sup>\*</sup>May be changed by end-user (if Enabled)

#### **Reminder Features**

Feature	Default
Reminders Shown*	Yes
Check pH	0FF
Check Sanitizer	0FF
Clean Filter	30 Days
Test GFCI	65 Days
Drain Water	100 Days
Change Cartridge	OFF
Clean Cover	<i>OFF</i>
Treat Wood	0FF
Change Filter	365 Days

### **Special Features**

Feature Default

Special Amperage Rule A (DIP SW 5 OFF) No Limitation

Special Amperage Rule B (DIP SW 5 ON) 1 High-Speed Pump\*\*

Drain Mode Disabled
Demo Mode Disabled
Automatic GFCI Test Disabled

Ozone Slaved to Heater Pump Yes

This setting will not allow both Pump 1 High and Pump 2 to run at the same time.



<sup>\*</sup> Editable by end-user

<sup>\*\*</sup> Special Amperage Rule B is (DIP Switch 5 ON) is only used with Setup 1-16 (Page 4).

# **TP400 Control Panel Features**Feature TP400T

Feature	TP400T	TP400W
Button 1	Temperature	Up
Button 2	Jets 1	Down
Button 3	Light 1	Light 1
Button 4	Jets 2	Jets 1

LED B1	Heat ON	Heat ON
LED B2	Jets 1	Unused
LED B3	Light 1	Light 1
LED B4	Jets 2	Jets 1

#### **TP400T**

50260

Includes Overlay PN 12511



#### **TP400W**

50260

Includes Overlay PN 12510

TP400W requires the use of an AX10A2 in Setups 1 – 4.



#### Download the User Interface and Programming Guide here:

http://service.balboa-instruments.com/zz40940\_download.zip

Blue Indicates New Custom Configuration Default (Setup 1)



Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending. All material copyright of Balboa Water Group.

#### **TP600 Control Panel Features Feature Default**

	20.000
Button 1	Jets 1
Button 2	Jets 2
Button 3	Flip
Button 4	Up
Button 5	Light 1
Button 6	Down

LED 1	Jets 1
LED 2	Jets 2
LED 3	Light 1
LED 4	Heat ON

#### TP600CE

50014-01



Includes Overlay PN 12101 TP600 (non-CE) should not be used



Download the User Interface and Programming Guide here:

http://service.balboa-instruments.com/zz40940\_download.zip Blue Indicates New Custom Configuration Default (Setup 1)



Manufactured under one or more of these patents. U.S. Patents: 5332944, 5361215, 5550753, 5559720, 5,883,459, 6253227, 6282370, 6590188, 6976052, 6965815, 7030343, 7,417,834 b2, Canadian Patent: 2342614, Australian patent: 2373248 other patents both foreign and domestic applied for and pending. All material copyright of Balboa Water Group.

### **Auxilliary Panel Features**

Feature	Default
Aux Button A1	Jets 1
Aux Button A2	Jets 2
Aux Button A3	Unused
Aux Button A4	Light

AX10 A1	No O/L	52803	AUX
AX10 A2	AUX O/L	55919 ►	
AX10 A3	No O/L	52805	
AX10 A4	No O/L	52806	
AX20 A1A2	No O/L	52800	A1 A2, 3 or 4
AX20 A1A3	No O/L	52801	
AX20 A1A4	No O/L	52802	
AX40	No O/L	52799	A1 A2 A3 A4

