### **BP501MNJ Tech Sheet**

**Customer:** Balboa Water Group

Part Number: 56621 5.5kW 800 Incoloy

56622 5.5kW 825 Incoloy 56623 5.5kW Titanium

Custom Box Overlay

Box Overlay Part Number N/A

UL System Model: BP501-BP501MNJ-BU

Software Version ID: M100\_201 V20.0

Software Version: 20.0

File Name: BP501\_20.0\_BP501MNJ\_TP9.hex

Configuration Signature: 9CF0B005

Eng. Project Number: 4149

Base PCBA: 56624

Control Panels (See later pages for more information):

TP900 Version 3.1 and later (Version 3.13 or later required for bba™)

TP400T Version 2.7 and later





### **System Revision History**

Part #	EPN	Date	Originator	Changes Made
56621 56622 56623	4149	05-01-14	BWG	MicroSilk® system with no jet pump, and with 120V operation default.

bba™ (Balboa Bluetooth Amp) connection is documented seperately.

bba™ is only integrated into graphic display panels (TP800, TP900 and spaTouch™). With TP600 the Aux button operation of bba™ must be used.

### **Basic Functions Setup 1**

#### **Power Requirements:**

120/240VAC, 50/60Hz\*, 16/48A, Class A GFCI-protected service (Circuit Breaker = 20/60A max.) 3 or 4 wires [hot, hot (optional), neutral, ground].

#### **System Ouputs:**

MicroSilk® 120VAC\* 1-Speed 10A max 30-minute timer
Circ Pump 120VAC\* 1-Speed 2A max Programmable File

1-Speed 2A max Programmable Filtration Cycles + Polling

This is the heater pump.

Must deliver 20 GPM through heater

Ozone 120VAC\* 1A max Slaved to Circ Pump
Spa Light 10VAC 0n/Off 1A max 240-minute timer

A/V (Stereo) 120VAC Hot 2A max Always on

Heater 5.5kW @ 240VAC max (~1.4kW @ 120V AC)

MicroSilk® is a registered trademark of Jason International




<sup>\*</sup>BP systems automatically detect 50Hz vs 60Hz.

<sup>\*</sup>MicroSilk®, Circ Pump and Ozone must be the same voltage.

### **Hardware Setup**

#### **Wiring Diagram**

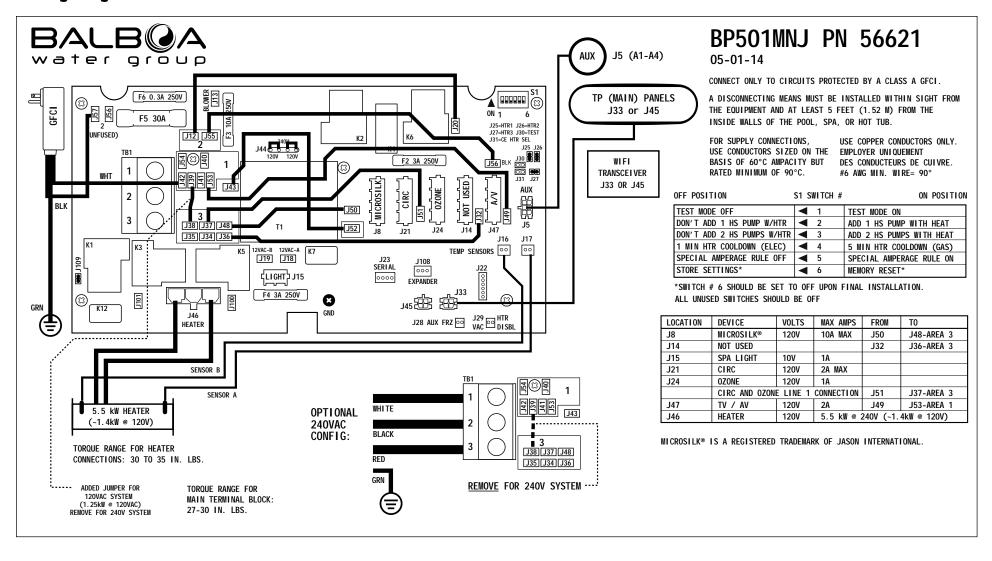

BALB (A

### **Setup Reference Table**

	Setup # Circ Pump		MicroSilk®	Temp Scale	
ĺ	1	Programmable Filtration + Polling	1-Speed	°F	

System (and any replacement board) is shipped in Setup 1



### Changing Software Setups with TP800 / TP900 / spaTouch™ Menued Panel

### Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.


#### DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

#### **Software Setups**

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

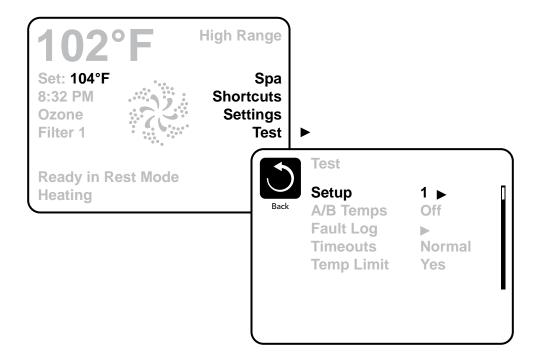



### **Changing Software Setups with TP600 / TP400**

### Test Menu Access (S1, Switch 1 ON) Service Technician ONLY.

#### DANGER! HIGH VOLTAGE WILL BE ACCESSIBLE! SERVICE TECHNICIAN ONLY!

While the system is running, move DIP Switch 1 (on S1 on the Main circuit board) to ON. The system will enter Test Mode.

Moving DIP Switch 1 to OFF will exit Test Mode.

# As soon as Switch #1 is placed in the ON position, the temperature will show "T" after it instead of F or C, indicating the System is in Test Mode

#### **Software Setups**

Under the TEST Menu, the Setup screen will allow changing the Setup from 1 to any number established by the Manufacturer. Changing the Setup may require wiring changes as well.

**You will have 1 minute** to complete the setup change after you manually exit Priming Mode. (Once familiar with the process, the Setup change should take less than 15 seconds.)



When the panel displays RUN PMPS PURG AIR, press any Temperature button ONCE to exit Priming Mode. You should see "---T" where the T indicates the system is in Test Mode.



Continued on Next Page.



### Changing Software Setups with TP600 / TP400 Continued


Again, You will have 1 minute to complete the setup change after you manually exit Priming Mode.


Immediately after exiting Priming Mode, press this sequence of buttons: Warm\*, Light, Warm, Warm, Warm. Continue to press Warm until the diplay shows the Setup Number (S-01, S-02, etc.) you want to switch to. When the correct setup number is showing, press Light once, and the system will reset, using the newly-selected Setup from that point on.

Move DIP Switch 1 to the OFF position to take the spa out of Test Mode. °F or °C will replace °T.

Using a permanent marker, write the Setup number on the Setup label mounted inside the system lid (right). This is very important to any service person in the future who may need to replace a circuit board or system and needs to change the Setup on a replacement part while in the field.

NOTE: Changing the Setup may require wiring changes as well - refer to the wiring diagram or wiring diagram addendum.

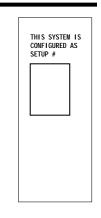

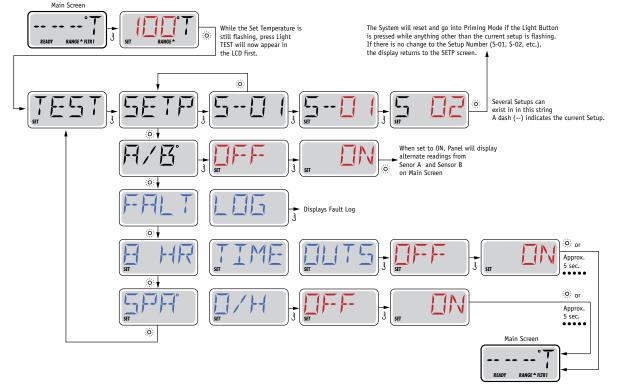

#### Kev

- Indicates Flashing or Changing Segment
- Indicates Alternating or Progressive Message every 1/2 second
- 3 A temperature button, used for "Action"
- Of Light or dedicated "Choose" button, depending on control panel configuration
- • • Waiting time varies depending on function

\*If the Control Panel does not have a Warm (Up) button, but rather a single Temp button, use the Temp button in place of the Warm button in the instruction above. (The flow chart assumes a single Temperature Button.)



## **Equipment Expansion**

**Expansion Features Control Connection** 

Default

None

Fuse

Relay 1/2 (J108)

N/A

### **DIP Switch Functions**

#### Fixed-fuction DIP Switches

A1 Test Mode (normally Off).

A2 In "ON" position, add one high-speed pump (or blower) with Heater.

A3 In "ON" position, add two high-speed pumps (or 1 HS Pump and Blower) with Heater.

A5 In "ON" position, enables Special Amperage Rule B. See Special Features section under Configuration Options for functionality with your system.

In "OFF" position, enables Special Amperage Rule A.

A6 Persistent memory reset (Used when the spa is powering up to restore factory settings as determined by software configuration).

A2 and A3 work in combination to determine the number of high-speed devices and blowers that can run before the heat is disabled. i.e. A2 and A3 in the ON position will allow the heater to operate with up to 3 high-speed pumps (or two HS Pumps and Blower) running at the same time. Heat is disabled when the fourth high-speed pump or blower is turned on.

**Note:** A2/A3 all off = No heat with any high-speed pump or blower.

#### **Assignable DIP Switches**

Template 56377 10-05-12

A4 In "ON" position, enables a 5-minute cooldown for some gas heaters (Cooling Time B).

In "OFF" position, enables a 1-minute cooldown for electric heaters (Cooling Time A).

Undesignated switches are not assigned a function.



### **Jumper Definitions**

J109	GFCI Test/Trip Enable/Disable  Note: This feature must be enabled in software as well.	J109 🚱
J30	Do Not Use	
J31	Non Applicable on UL models (Used on CE models only)	J31 &
J29	Heater Disable Switch Connection. If J29 is shorted by any means, the heater will not run until J29 is no longer shorted.  If J29 is shorted during power-up "J29" will appear on the panel.  The message can be dismissed with a button press, and is the only control panel notification of J29 being shorted.  No message is displayed if J29 is shorted after power-up, but the heater will not run until J29 is no longer shorted.  J29 expects a switch closure (not a voltage) as the command signal.  In some areas, a local power company may offer discounts based on voluntary "power shedding" devices that may be installe	J29 💍
J25, J26, J27	Heater Type Settings.  Note: Factory Configured do not change.	<b>ૄ</b> J27 J25 <b>ૄ 2</b> J26
 J44	Jumper on center two pins (230V) when no neutral wire is used (240V-dedicated).  Two Jumpers installed; one on left 2 pins and one on right 2 pins (115V) when neutral wire is used.	J44 3 3 3 3 115V

### Warning!

Setting DIP switches or jumpers incorrectly may cause abnormal system behavior and/or damage to system components.

Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.

Contact Balboa if you require additional configuration pages added to this tech sheet.



#### **General Features**

Feature	Default	
Pump 1 in Filter Cycle (Circ Only)	No	
Pump 1 Low Timer	30 Minutes	Applies in non-circ Setups (configurations) only
General Pump Timer	15 Minutes	
Blower Timer	15 Minutes	
MicroSilk® Timer	30 Minutes	
Light Timer	240 Minutes	
Circ (when enabled)	Programmable + Polling	
Cleanup Cycle	30 Minutes	
Cleaup as Preference setting	Yes	
0zone	With Heater Pump*	
Ozone Suppression	0FF	
Pump Purge	60 Seconds	
Blower/MicroSilk® Purge	30 Seconds	
Mister Purge	5 Seconds	
Purge Type	Serial - Pumps at lowest	t speed

#### Blue Indicates New Custom Configuration Default (Setup 1)



<sup>\*</sup> The heater Pump can be either a Circ Pump or Pump 1 Low.

### **Temperature Features**

responds to a Fahrenheit value.

Feature Display Personal Perso

All temperatures must be specified in °F. The system converts °F to °C dynamically. If Celsius is required for default settings, choose a desired °C value that (after rounding) cor-

°C	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22
°F	39	41	43	45	46	48	50	52	54	55	<i>57</i>	59	61	63	64	66	68	70	72
°C	23	24	25	26	27	28	29	30	31	<i>32</i>	33	34	<i>35</i>	36	37	38	39	40	
°F	73	<i>75</i>	77	79	81	82	84	86	88	90	91	93	95	97	99	100	102	104	

Hi-Range Min. Set Temp	80°F
Hi-Range Max. Set Temp	104°
Hi-Range Default Temp*	100°
Lo-Range Min. Set Temp	50°F
Lo-Range Max. Set Temp	99°F
Lo-Range Default Temp*	70°F
Freeze Threshold	44°F

Freeze Type Rotating - Pumps at Lowest Speed

Temp Lock Type Temp + Settings

Blue Indicates New Custom Configuration Default (Setup 1)



<sup>\*</sup>May be changed by end-user (if enabled)

### **Time Features**

Feature	Default
Time Format*	12 Hour
Filter 1 Start Hour*	20:00 (8:00 PM)
Filter 1 Duration*	2 Hours
Filter Cycle 2 Default*	OFF
Filter 2 Start Hour*	08:00 (8:00 AM)
Filter 2 Duration*	15 Minutes
Light Cycle	Disabled
Light Cycle Default*	OFF
Light Cycle Start Hour*	21:00 (9:00 PM)
Light Cycle Duration*	15 Minutes
Cooling Time A	1 Minute
Cooling Time B	5 Minutes

Blue Indicates New Custom Configuration Default (Setup 1)



<sup>\*</sup>May be changed by end-user (if enabled)

#### **Reminder Features**

Feature	Default
Reminders Shown*	Yes
Check pH	0FF
Check Sanitizer	0FF
Clean Filter	30 Days
Test GFCI	65 Days
Drain Water	100 Days
Change Cartridge	OFF
Clean Cover	0FF
Treat Wood	0FF
Change Filter	365 Days

Blue Indicates New Custom Configuration Default (Setup 1)



<sup>\*</sup>May be changed by end-user (if enabled)

### **Special Features**

Feature Default

Special Amperage Rule A No Limitation

Special Amperage Rule B No Limitation

Drain Mode Disabled
Demo Mode Disabled
GFCI Trip Enabled
Automatic GFCI Test Disabled


Ozone Slaved to Heater Pump Yes

Dual Voltage Heater Always Input Voltage

Safety Suction Disabled

### **TP900 Panel Configuration**

#### **Button Layout Table**

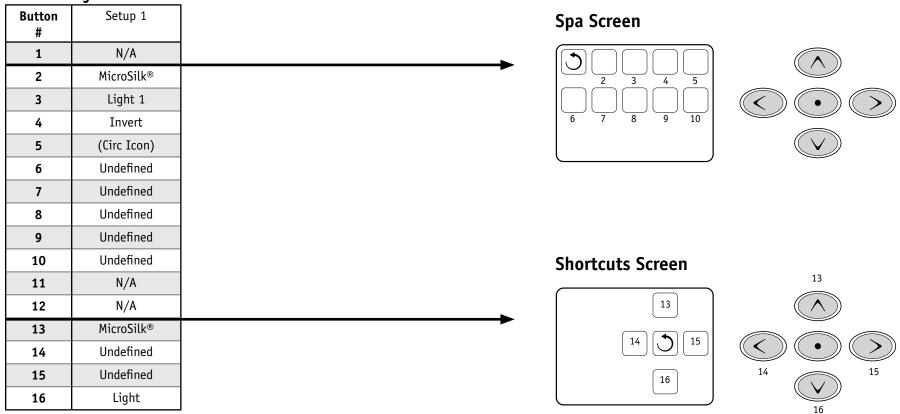


A Circ Icon will appear when a Circ Pump is configured.



## **TP400 Panel Configuration**

#### **Button Layout Table for TP400T**

Button #	Setup 1
1	Temperature
2	MicroSilk®
3	Light 1
4	Undefined
LED 1	Heater ON
LED 2	MicroSilk® ON
LED 3	Light ON
LED 4	Undefined

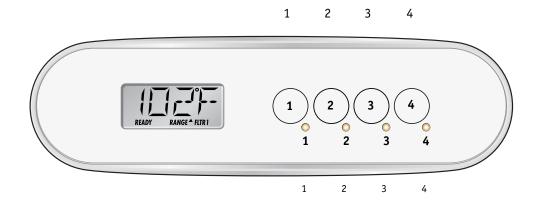

**TP400T** 



### **Auxilliary Panel Features on Bank 1\***

Feature	Default
Aux Button A1	$MicroSilk^{\circledR}$
Aux Button A2	Undefined
Aux Button A3	Undefined
Aux Button A4	Light

\*Bank 1 consists of J5 on the Main Circuit Board.

Aux Connection Splitter PN25257 may be required.

Buttons that are assigned to equipment that is not defined in a Setup will not do anything in that Setup.



#### **Auxilliary Panel Features**

#### AX10 Panels on Bank 1\*

A1, AX10A1 No 0/L 52803 A2, AX10A2 No 0/L 52804 A3, AX10A3 No 0/L 55805 ► A4, AX10A4 No 0/L 52806



Call Customer Service for additional information about Auxiliary Panels.

Auxiliary Panel Part Number


Overlay Part Number

\*Bank 1 consists of J5 on the Main Circuit Board.

Aux Connection Splitter PN25257 may be required.

#### AX20


AX20 A1A2	No O/L	52800
AX20 A1A3	No O/L	52801
AX20 A1A4	No O/L	52802

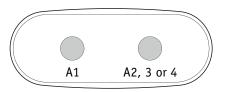

AX20 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 or A4.

#### **AX40**

AX40 No 0/L 52799

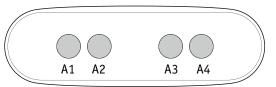

AX40 Auxiliary Panel plugged into Bank 1 will operate A1 + A2, A3 and A4.

