

# EL2001 Mach 3 Hot Sheet

## Balboa Instruments System PN 56002-03

System Model # E2P-EL2001M2-YCAJ

Software Version # 30

EPN # n/a (See ECR 6142)

Base PCBA – PN 53974-04

PCB EL2000 – PN 22896 Rev B

HEX File – 10011430

### Base Panels

ML900 – PN 52654

ML700 – PN 52649

ML400 – PN 52684



# System Revision History

System PN	EPN	Date	Requested By	Changes Made
56002-02	2130	11.27.2006	Balboa	Software update to v28
56002-03	n/a	07.23.2007	Balboa	Software update to v30

# Basic System Features and Functions

## Power Requirements

- 240VAC, 60Hz, 48A, Class A GFCI-protected service (Circuit Breaker rating = 60A max.)
- 4 wires (hot, hot, neutral, ground)

## System Outputs

### Setup 1 (As Manufactured)

- 240V Pump 1, 2-Speed
- 240V Pump 2, 2-Speed
- 240V Blower, 1-Speed
- 120V Ozone
- 12V Spa Light
- 120V AV (Stereo)
- 240V 3.0kW Heater \*


## Optional Devices

- 240V Circ Pump

\* Heater wattage is rated at 240V. When running 120V to heater, output is approximately 25%.

## Additional Options

- Full Feature Dolphin Remote and Spa-only Dolphin Remote
- Spa Monitor  
Connects to Main Panel terminal J70 or J71 or J72
- IR or RF Dolphin Receiver Module  
Connects to Remote terminal J20
- Ozone Generator  
Connects to terminal J9
- MoodEFX Lighting  
Connects to Spa Light terminal J12
- FiberEFX Lighting  
Connects to Spa Light terminal J12
- Stereo System  
Connects to A.V. terminal J4

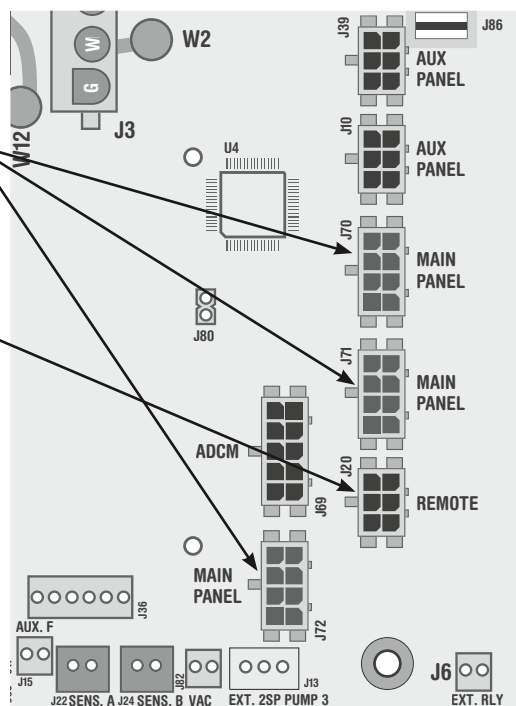

# Persistent Memory and Powering Up

Any time you change DIP Switches or Software Configuration Settings that affect parameters the user can change (any filter settings, set temperature default, Celsius vs Fahrenheit, 12-hour vs 24-hour time, reminders suppression, etc), you must reset Persistent Memory for your DIP Switch or Software Configuration Settings changes to take effect. You should also reset Persistent Memory after loading a new file into a board (using the ESM, purchased separately).


## To reset Persistent Memory:

- Power down.
- Set A12 ON (See illustration below).
- Power up.
- Wait until “P<sub>r</sub>” or “PRIMING MODE” is displayed on your panel.  
Note: If “C<sub>FE</sub>” appears see section below.
- Set A12 OFF. (This can be done safely with power on if you use a non-conductive tool such as a pencil to push the switch back to the OFF position. Otherwise, power down before setting A12 OFF)
- Power up again (if you powered down in the previous step).
- For all other power ups, leave A12 OFF.

## About Persistent Memory and Time of Day Retention:

This system uses memory that doesn't require a battery to store a variety of settings. What we refer to as Persistent Memory stores all the User Preferences, as well as all the filter settings, the set temperature, and the heat mode.

Persistent Memory is not used for Time of Day. Time of Day needs to be “kept running” (not just stored) while the power is off, so a separate Real Time Clock feature (on all models except the EL1000) keeps track of Time of Day while the unit is off. Time of Day Retention, and Time of Day Retention alone, is controlled by the J91 jumper. J91 must be set according to main system panel used.

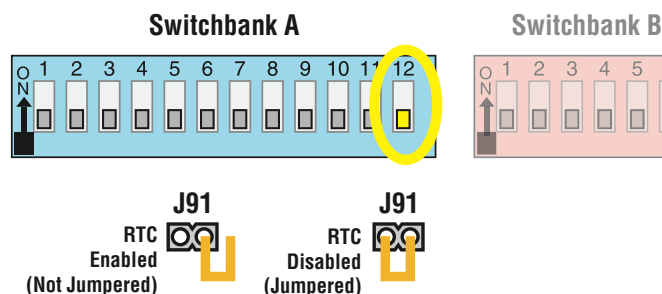

## C<sub>FE</sub> message on power up:

If “C<sub>FE</sub>” appears before (and instead of) “P<sub>r</sub>” or “PRIMING MODE”, you have not configured DIP Switches and/or Software Configuration Settings in a valid manner. This must be corrected before you can reset Persistent Memory.

The switch numbers, jumpers, or configuration settings displayed after “C<sub>FE</sub>” are ones with which the system has found a configuration problem. For example:

- “C<sub>FE</sub> A5 B2” would mean that the combination of how you've set A5 and how you've set B2 is not supported on this system.
- “C<sub>FE</sub> J99” would mean that there is a problem with jumper J99
- “C<sub>FE</sub> P3 1 BL 1” would mean that the combination of how you've set pump 3 for 1-speed and blower for 1-speed is not supported on this system.
- “C<sub>FE</sub> P3\_ BL\_” would mean that the combination of how you've set DIP switches which have been assigned to pump 3 and blower is not supported on this system.

## Power Up Display Sequence

Upon power up, you should see the following on the display:


- Three numbers in a row, which are the SSID (the System Software ID). The third display of these numbers is the Software Version, which should match the version of your system. For example, if these three numbers are 100 134 26, that is a Mach 3 EL8000 at version 26.
- If there is a Configuration Error, the C<sub>FE</sub> message (see above) will appear at this point (and none of the messages below will display). Otherwise what comes next is:
- An indication of either the input voltage detected (EL1000/EL2000), or the heater wattage range supported (EL8000/GL2000/GL8000).
  - Heater wattage display: “1-3” means the system supports a heater from 1 kW to 3 kW. “3-6” means the system supports a heater from 3 kW to 6 kW. “3-3” means the system supports a 3 kW heater only. (These ranges may be modified slightly in the case of special heaters, which the next bullet covers.)
- Input voltage display: A system showing “240” supports 3 kW to 6 kW heaters. A system showing “120” supports the very same heaters, although at 120V those heaters will function at only 1/4 of their 240V rated wattage. (The system shows only either “240” or “120” as a general indication of input voltage; it does not show the actual input voltage.)
- If your system is using a special type of heater, a display such as “H 5” may appear next. If your system is using the generic Balboa heater, no heater type display will appear.
- “P<sub>r</sub>” or “PRIMING MODE” will appear to signal the start of Priming Mode.

At this point, the power up sequence is complete. Refer to the User Guide for the ML Series panel on your system for information about how the spa operates from this point on.

# Wiring Configuration and DIP Settings


## Setup 1 (As Manufactured)

- 240V Pump 1, 2-Speed
- 240V Pump 2, 2-Speed
- 240V Blower, 1-Speed
- 240V Circ Pump (Optional)
- 12V Spa Light
- 120V Ozone
- 120V AV (Stereo)
- 240V 3.0kW Heater
- ML900 or ML700 Main Panel

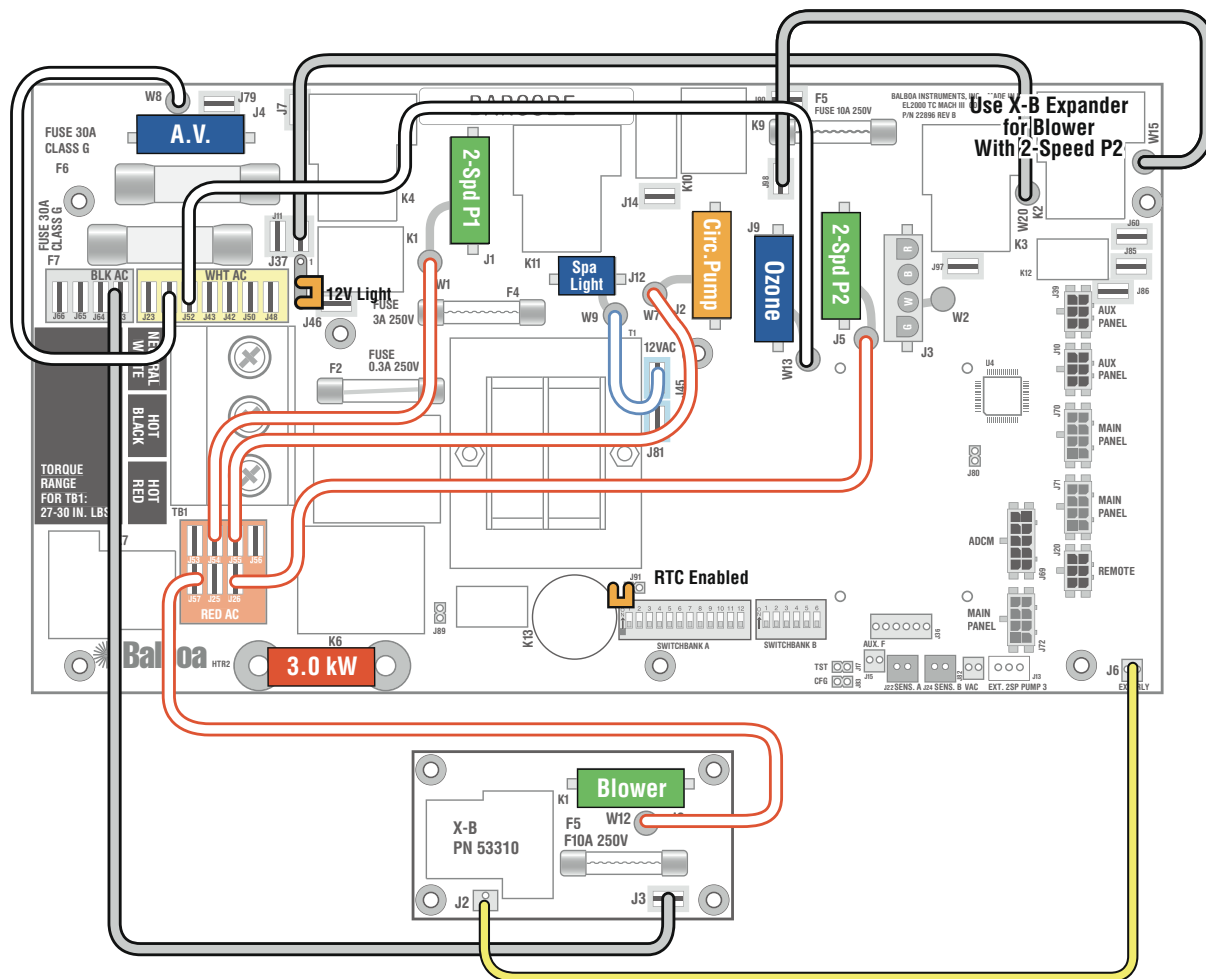

**WARNING:** Main Power to system should be turned OFF BEFORE adjusting DIP switches.

**WARNING:** Persistent Memory (A12) must be RESET to allow new DIP switch settings to take effect. (See Persistent Memory page)

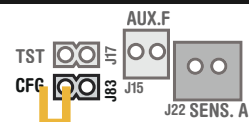

When the Logic Jumper is not installed on J83 (CFG),  
DIP Switch Settings are enabled.  
DIP Switches will then operate as shown below.

SSID #
100
114
30


### Switchbank A




A1, Test Mode OFF  
A2, High Amp  
A3, Filter by Time  
A4, 12 Hr Time  
A5, Degrees F  
A6, Short Timeouts

A7, Cleanup Cycle OFF  
A8, 1Hr O<sub>3</sub> Supress OFF  
A9/A10, No Circ Pump  
A11, O<sub>3</sub> w/ P1 Low and P1 is 2-Spd  
**A12, Memory Retained**

### Switchbank B



B1, Pump 2 2-Speed  
B2, Pump 2 Enabled  
B3, Blower Enabled  
B4, No Fiber/Wheel  
B5, Pump 3 Disabled  
B6, Panel Scrunching OFF



### Wiring Color Key

- 120 Volt Connections
- 240 Volt Connections
- Black AC Jumpers
- 12 Volt Connections
- Relay Control Wires

### Board Connector Key

- 1 Typically Line voltage
  - 2 Typically Line voltage for 2-speed pumps
  - 3 Neutral (Common)
  - 4 Ground
- Note flat sides in connector

# DIP Switches and Jumpers Definitions

## WARNING:

- Setting DIP switches incorrectly may cause abnormal system behavior and/or damage to system components.
- Refer to Switchbank illustration on Wiring Configuration page for correct settings for this system.
- Contact Balboa if you require additional configuration pages added to this hot sheet.

## DIP Switchbank A Key

A1	.....	Test Mode (normally Off)
A2	.....	In "ON" position, heater can run while any/all high-speed pumps or blowers are running (High amperage)
	.....	In "OFF" position, heater is disabled while any high-speed pump or blower is running (Low amperage)
A3	.....	In "ON" position, filter cycles are programmed by duration for non-time capable panels
	.....	In "OFF" position, filter cycles are programmed to start and end times for time capable panels
A4*	.....	In "ON" position, displays time in 24 hours (military\European time)
	.....	In "OFF" position, displays 12 hour time
A5*	.....	In "ON" position, displays temperature in Celsius
	.....	In "OFF" position, displays temperature in Fahrenheit
* Sets default for user preferences - only applies when persistent memory is reset (A12 On) during power-up		
A6	.....	In "ON" position, Equipment timeout 30 minutes (4 hours for Pump 1-Low)
	.....	In "OFF" position, Equipment timeout 15 minutes (2 hours for Pump 1-Low)
A7	.....	In "ON" position, Cleanup Cycle – 30 minutes after spa use/timeout, Pump 1-Low & Ozone or Circ Pump and Ozone run for 1 hour
	.....	In "OFF" position, no Cleanup Cycle
A8	.....	In "ON" position, Ozone suppression for one hour after pump/blower button press
A9 and A10	.....	See <b>Table</b> for Circ Pump Behavior settings
A11	.....	In "ON" position ( <b>non-circ mode operation</b> ) Pump 1 is two-speed, Ozone is ON in Filter & Cleanup Cycles only ( <b>in any circ mode</b> ) Pump 1 is one-speed, Ozone is ON with circ pump
	.....	In "OFF" position ( <b>non-circ mode operation</b> ) Pump 1 is two-speed, Ozone is ON with Pump 1-Low ( <b>in any circ mode</b> ) Pump 1 is two-speed, Ozone is ON with circ pump
A12	.....	Persistent memory reset (normally off) (used when spa is powering up)

A9	A10	Circ Pump Behavior
OFF	OFF	No Circ Pump or Circ Pump not plumbed w/heater
ON	OFF	24 Hours
OFF	ON	24 Hr w/3°F Shut-Off
ON	ON	Acts like Pump 1-Low (Filter Cycles, Polls)

## DIP Switchbank B Key

B1	.....	In "ON" position, single-speed Pump 2
	.....	In "OFF" position, two-speed Pump 2
B2	.....	In "ON" position, Pump 2 enabled
	.....	In "OFF" position, Pump 2 disabled
B3	.....	In "ON" position, Blower enabled
	.....	In "OFF" position, Blower disabled
B4	.....	In "ON" position, Fiber and Wheel instead of Spa Light (if A9 & A10 are both OFF, Fiber uses J2 connector; if either A9 or A10 is ON, X-FOW Kit required to run Fiber)
	.....	In "OFF" position, Spa light enabled
B5	.....	In "ON" position, Pump 3 enabled (Jets 3 replaces Blower on Aux panel)
	.....	In "OFF" position, Pump 3 disabled
B6	.....	In "ON" position, Alternate Panel layout (ML900 scrunching enabled - ML550 / 700 Jets 3 replaces Blower)
	.....	In "OFF" position, Normal Panel layout

## Jumpers

- J37** Jumper on Pins 1 and 2 will power one leg of J12 (Spa Light) at 120 Volts AC.  
Jumper on Pins 2 and 3 will power one leg of J12 (Spa Light) at 12 Volts AC.  
*Note: W9 controls voltage on the other leg of J12 and must be set for the same voltage.*
- J91** Jumper on 1 Pin only enables Real Time Clock function; use with time capable panels.  
Jumper on Pins 1 and 2 disables RTC function; use with non-time capable panels.

# Ozone Connections

**Ozone Connector Voltage:** The EL circuit board is factory configured to deliver a preset voltage (120V or 240V) to the on-board ozone connector (J9). See the ratings table on the wiring diagram attached to the cover of the enclosure for the configured voltage. For 240V output W13 connects to Red AC and for 120V output W13 connects to White AC.

The voltage to the ozone connector can be changed in the field if required. W13 just needs to be set for the required voltage.

**Balboa Ozone Generator:** If the board is set up to operate a 120V ozone generator, the connector on the ozone generator is likely to be configured correctly, but should be compared to the illustration below.

If a 240V ozone generator is required, be sure the red wire in the ozone cord is positioned in the connector next to the green ground wire as described below.


*Note: A special tool is required to remove the pins from the connector body once they are snapped in place. Check with your Balboa Account Manager for information on purchasing a pin-removal tool.*

## Balboa Ozone connector configuration for 120V 60Hz

Line - Black conductor  
Use this slot for the leftover Red conductor  
Common - Install the White conductor here for 120V ozone  
Ground (Green) conductor

## Balboa Ozone connector configuration for 240V 60Hz

Line - Black conductor  
Use this slot for the leftover White conductor  
Common - Install the Red conductor here for 240V ozone  
Ground (Green) conductor

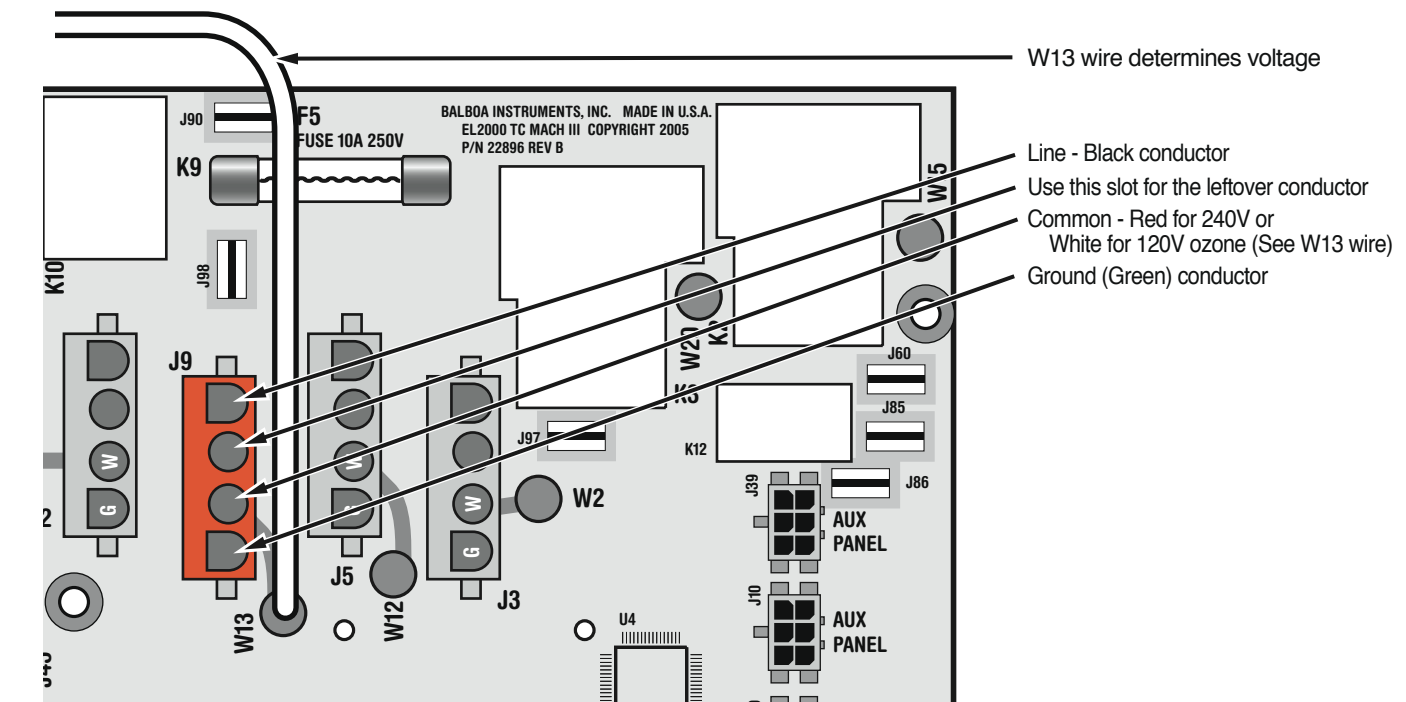



# Panel Configurations

## TIME CAPABLE

*Note: RTC jumper (J91) on Main PCBA must be OFF (1 pin only)*



ML900

PN 52654 with Overlay PN 40025

- Connects to Main Panel terminal J70, J71, or J72



ML700

PN 52649 with Overlay PN 11281

- Connects to Main Panel terminal J70, J71, or J72

## NON-TIME CAPABLE

*Note: Connects to Main Panel terminal J70, J71, or J72*  
*Note: RTC Jumper (J91) on Main PCBA must be ON (both pins jumpered), unless a Time Capable panel is also used.*



ML400

PN 52684 with Overlay PN 11345